 


120-150-180-215 MOWERS FRAME COMPONENTS

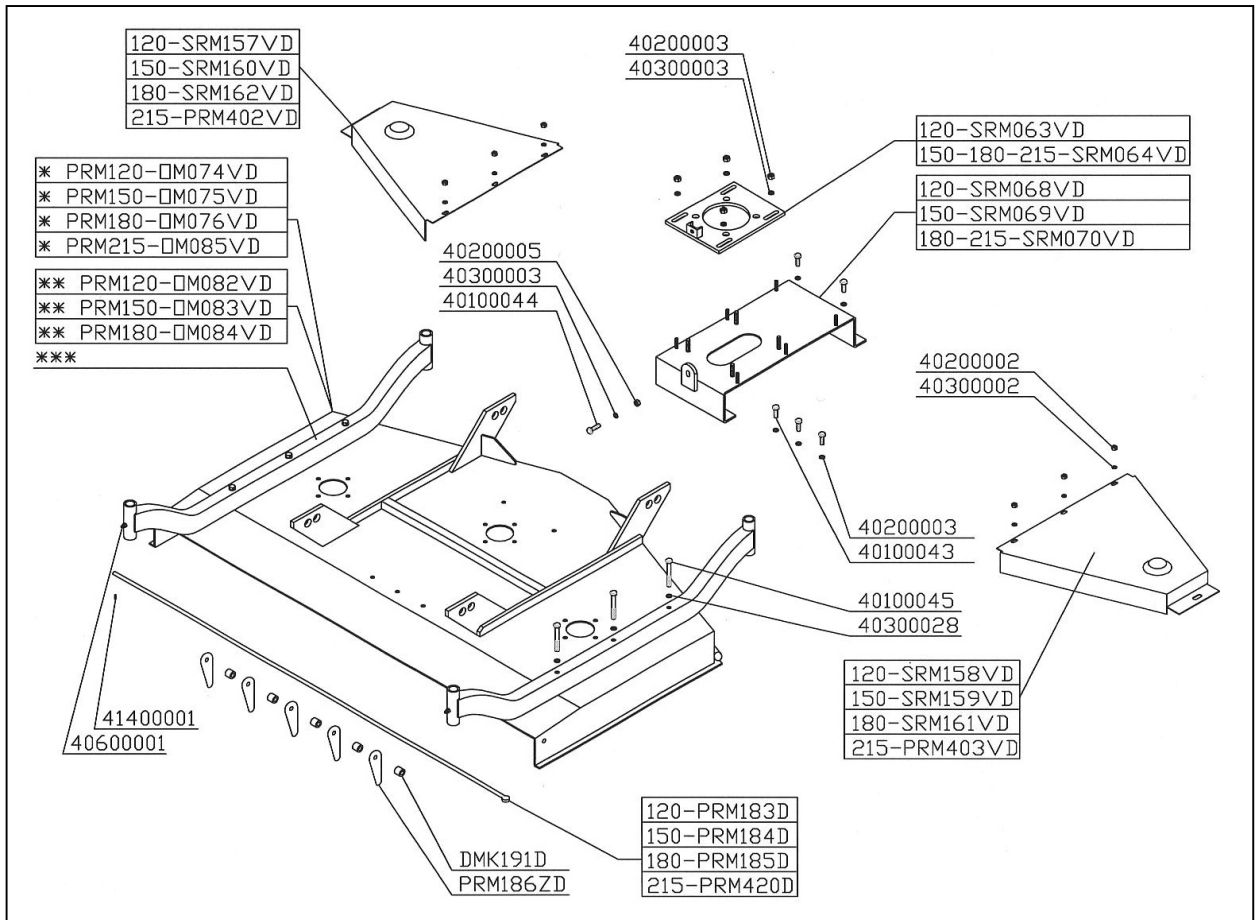


* : Left and right mowers.

** : Rear mower.

- ***- WHEEL BRACKET/WHEEL JOINT						
Mower type	Rubber wheel Ø 210		Rubber wheel Ø 310		Pneumatic wheel Ø 330	
	Wheel code	Bracket code	Wheel code	Bracket code	Wheel code	Bracket code
120	SRM071D	PRM063VD	SRM116D	PRM075VD	SRM115D	PRM075VD
150	SRM071D	PRM065VD	SRM116D	PRM076VD	SRM115D	PRM076VD
180	SRM071D	PRM064VD	SRM116D	PRM077VD	SRM115D	PRM077VD
215	SRM071D	PRM064VD	SRM116D	PRM077VD	SRM115D	PRM077VD
Standard	X					
Option			X		X	

NOTE : For wheels spare parts see page 28.

 120-150-180-215 MOWERS TRANSMISSION

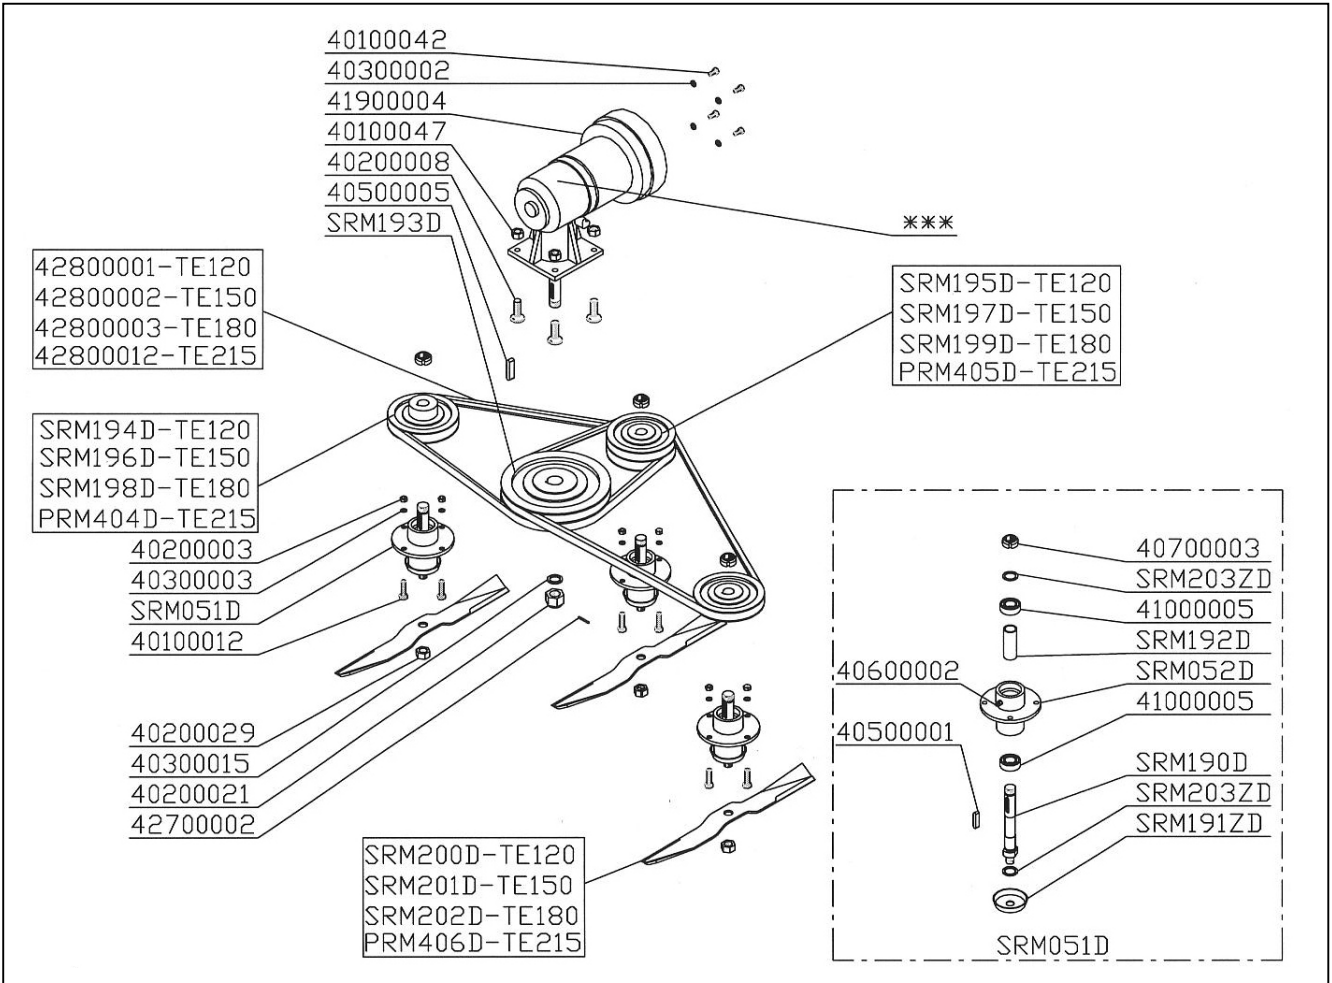


*** :

Left mower uses gear box code 42000010.

Right and rear mowers use gear box code 42000006.

 
235 MOWER FRAME COMPONENTS

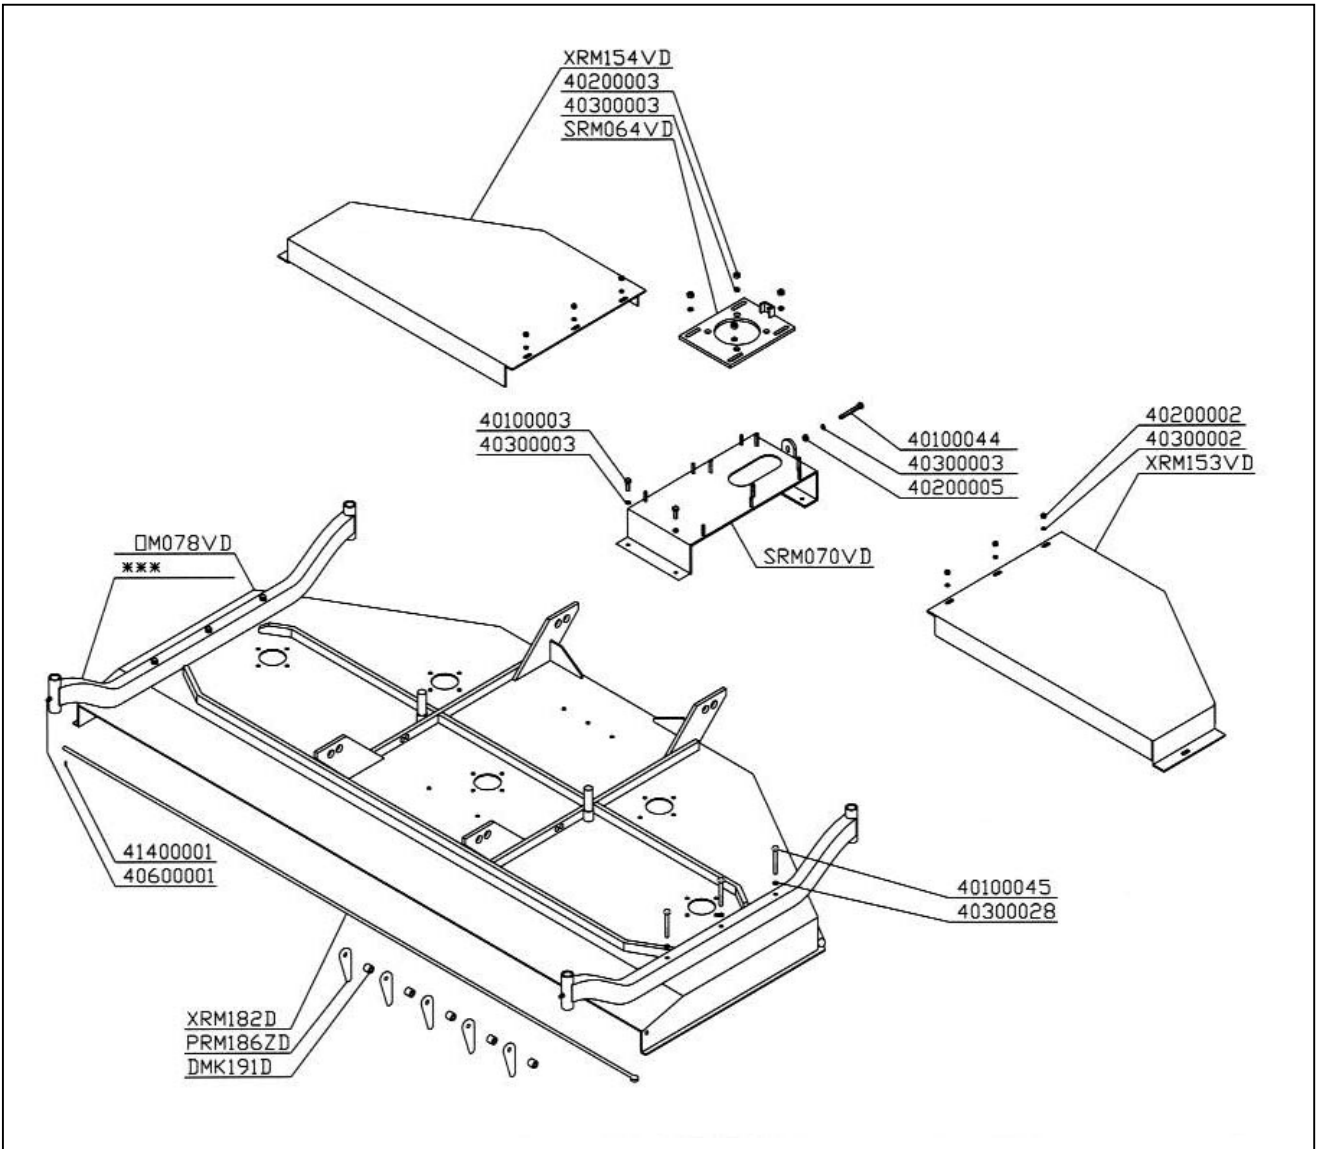

- ***- WHEEL BRACKET/WHEEL JOINT						
	Rubber wheel Ø 210		Rubber wheel Ø 310		Pneumatic wheel Ø 330	
Mower type	Wheel code	Bracket code	Wheel code	Bracket code	Wheel code	Bracket code
235	SRM071D	PRM065VD	SRM116D	XRM057VD	SRM115D	XRM057VD
Standard	X					
Option			X			X


NOTE : For wheel spare parts see page 28.

 235 MOWER TRANSMISSION

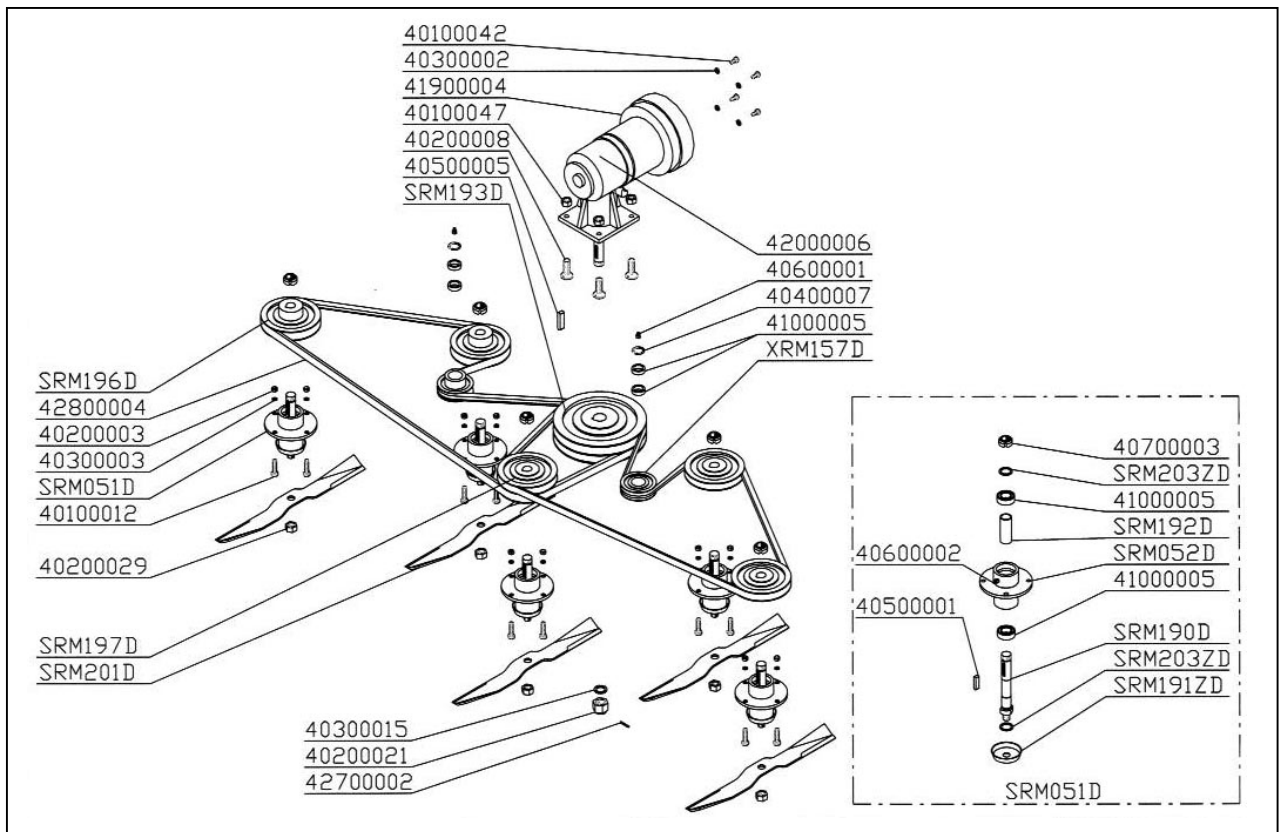


WHEELS AND FRONT ROLL SPARE PARTS

 
∅330 - SRM115D

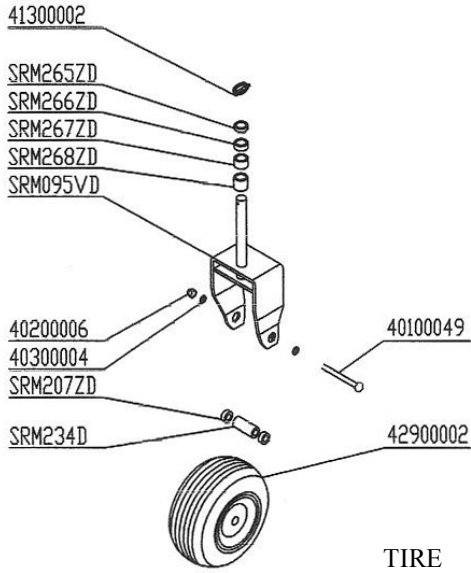


∅310 - SRM116D

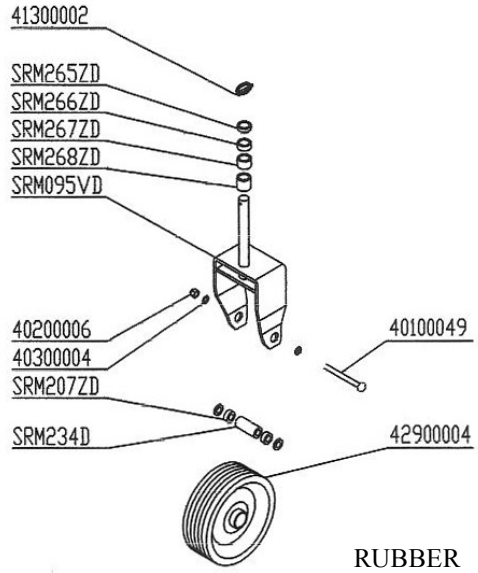 


□M100D

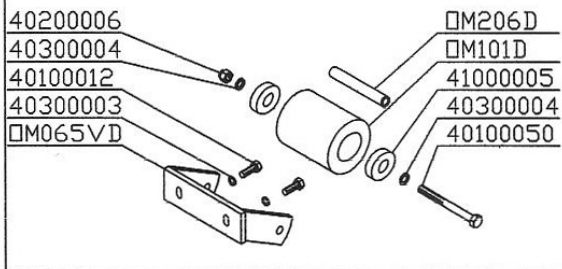 


∅210 - SRM071D

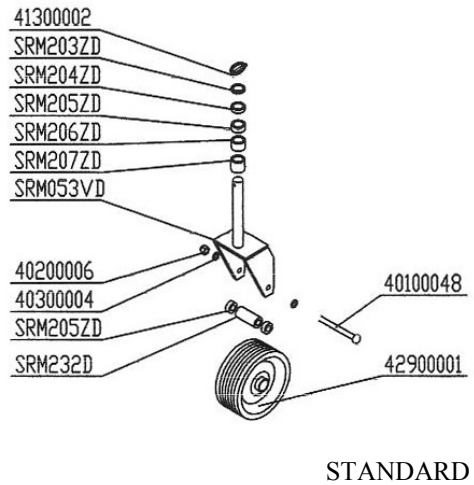 


CENTRAL LUBRICATION COMPONENTS

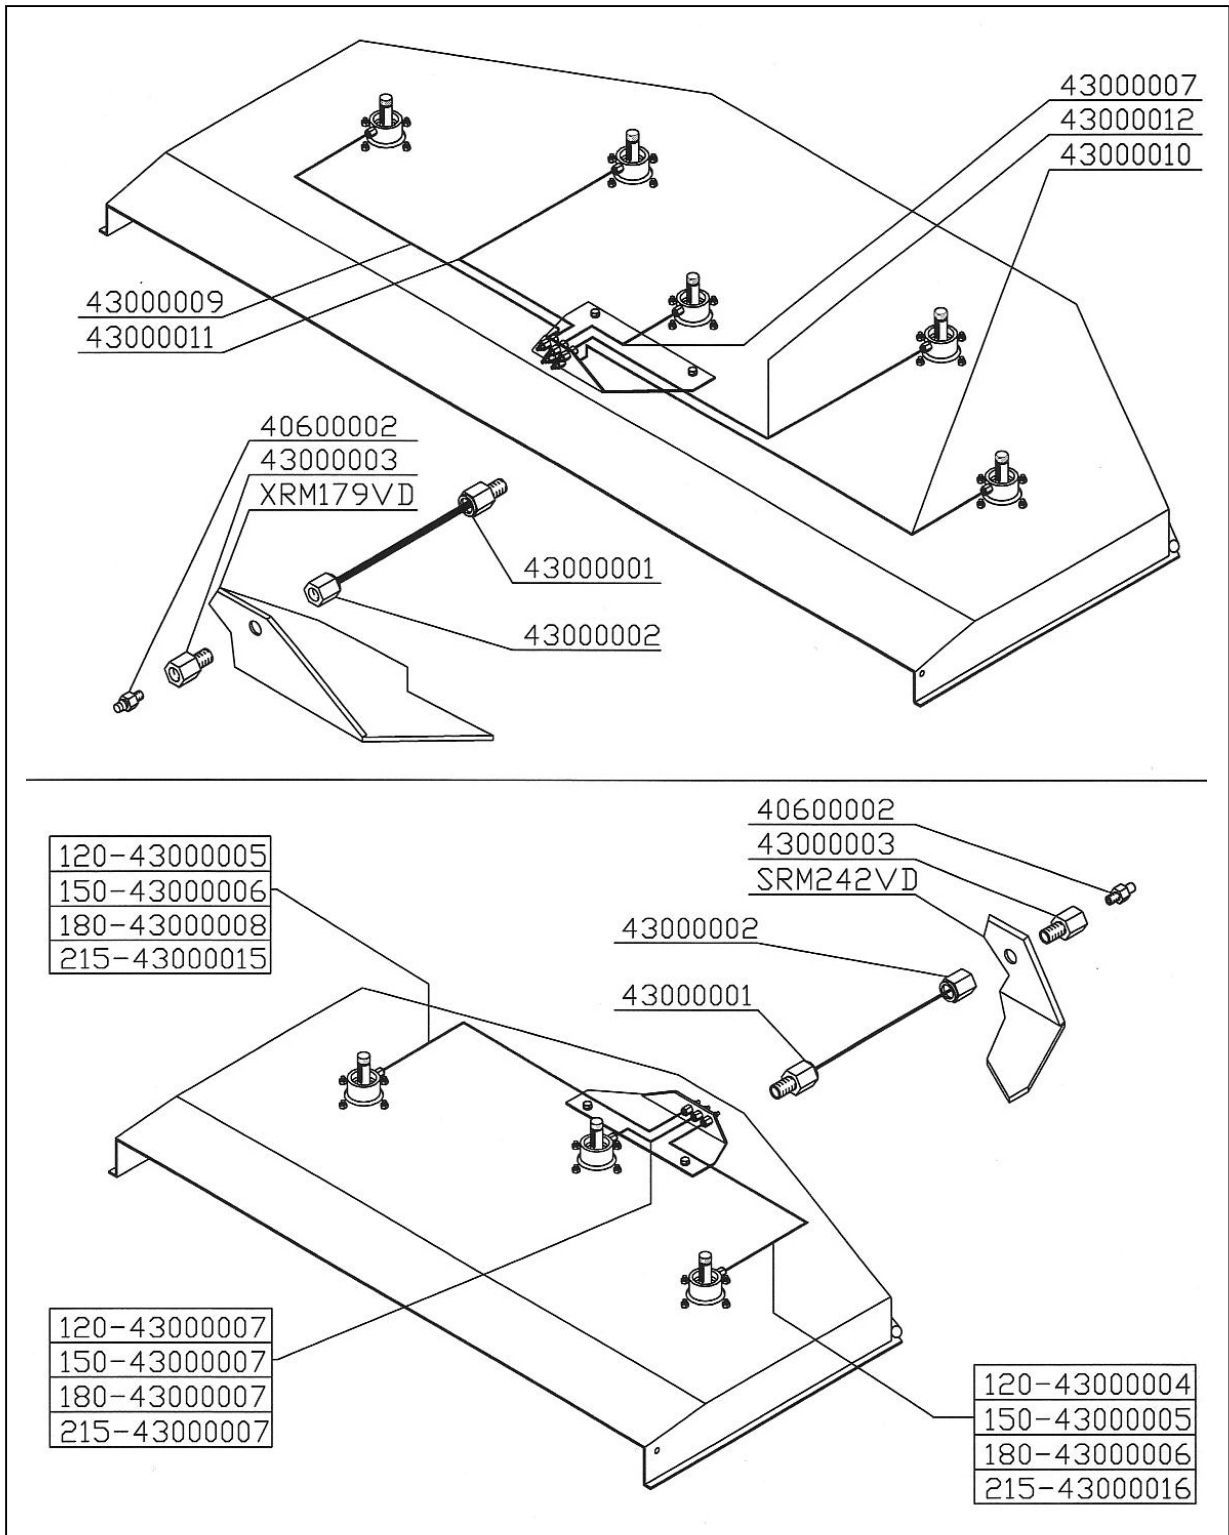 

MAIN FRAME COMPONENTS

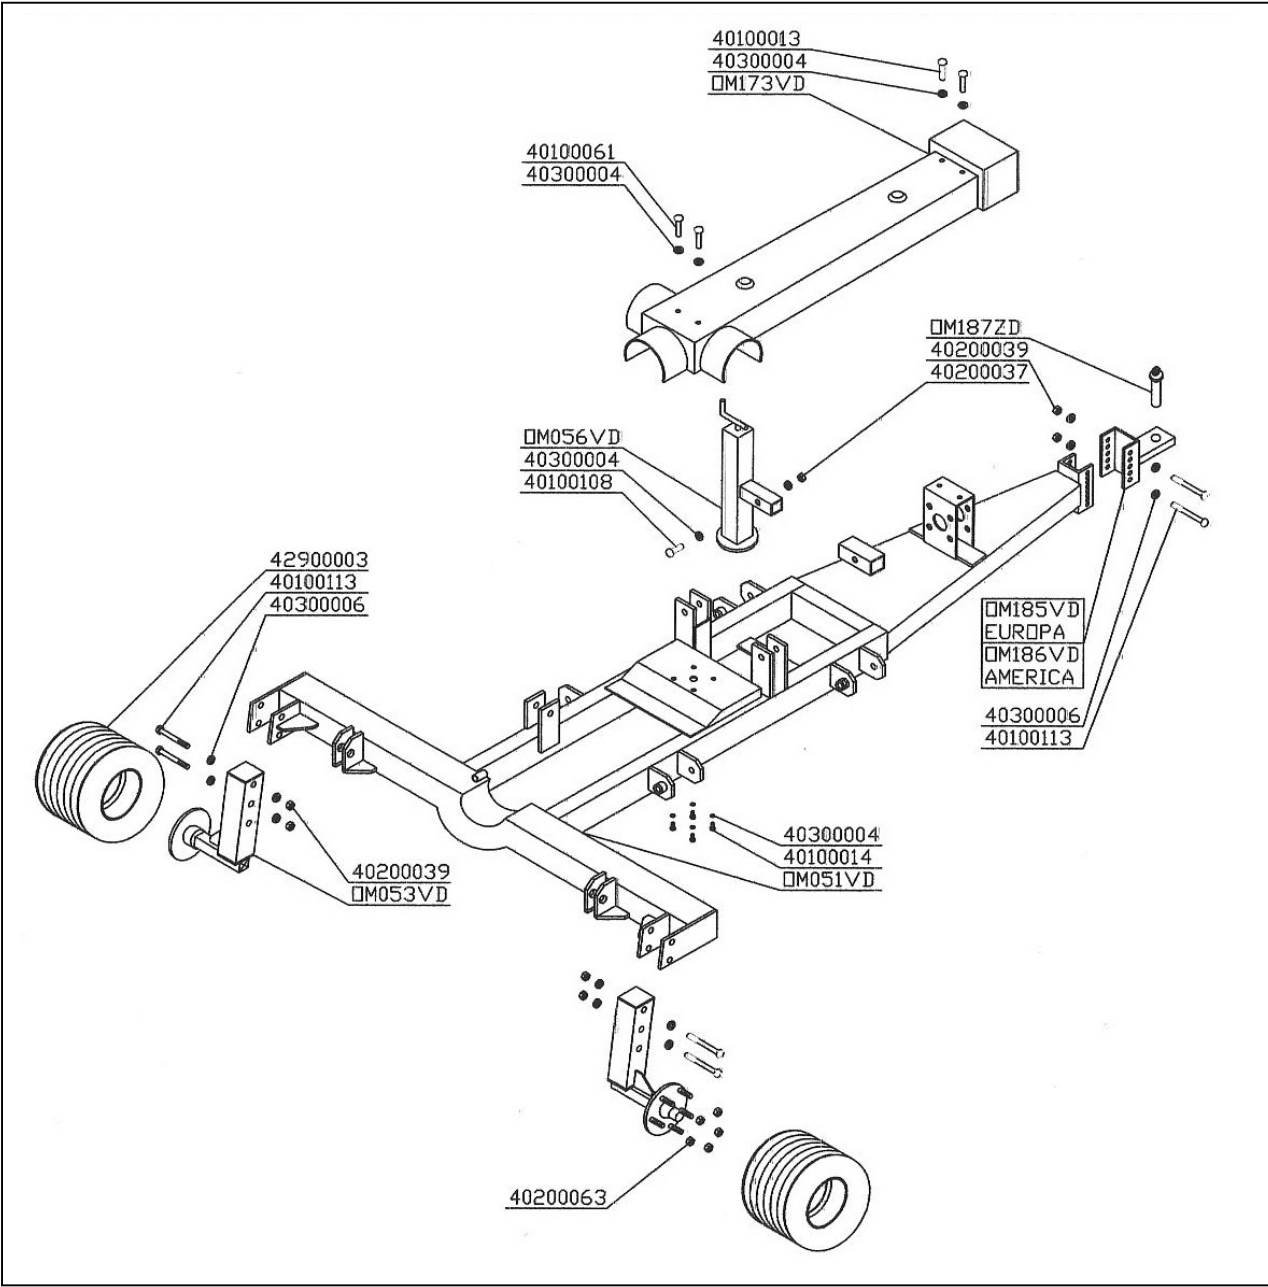 


SAFETY SIDE DEVICE COMPONENTS

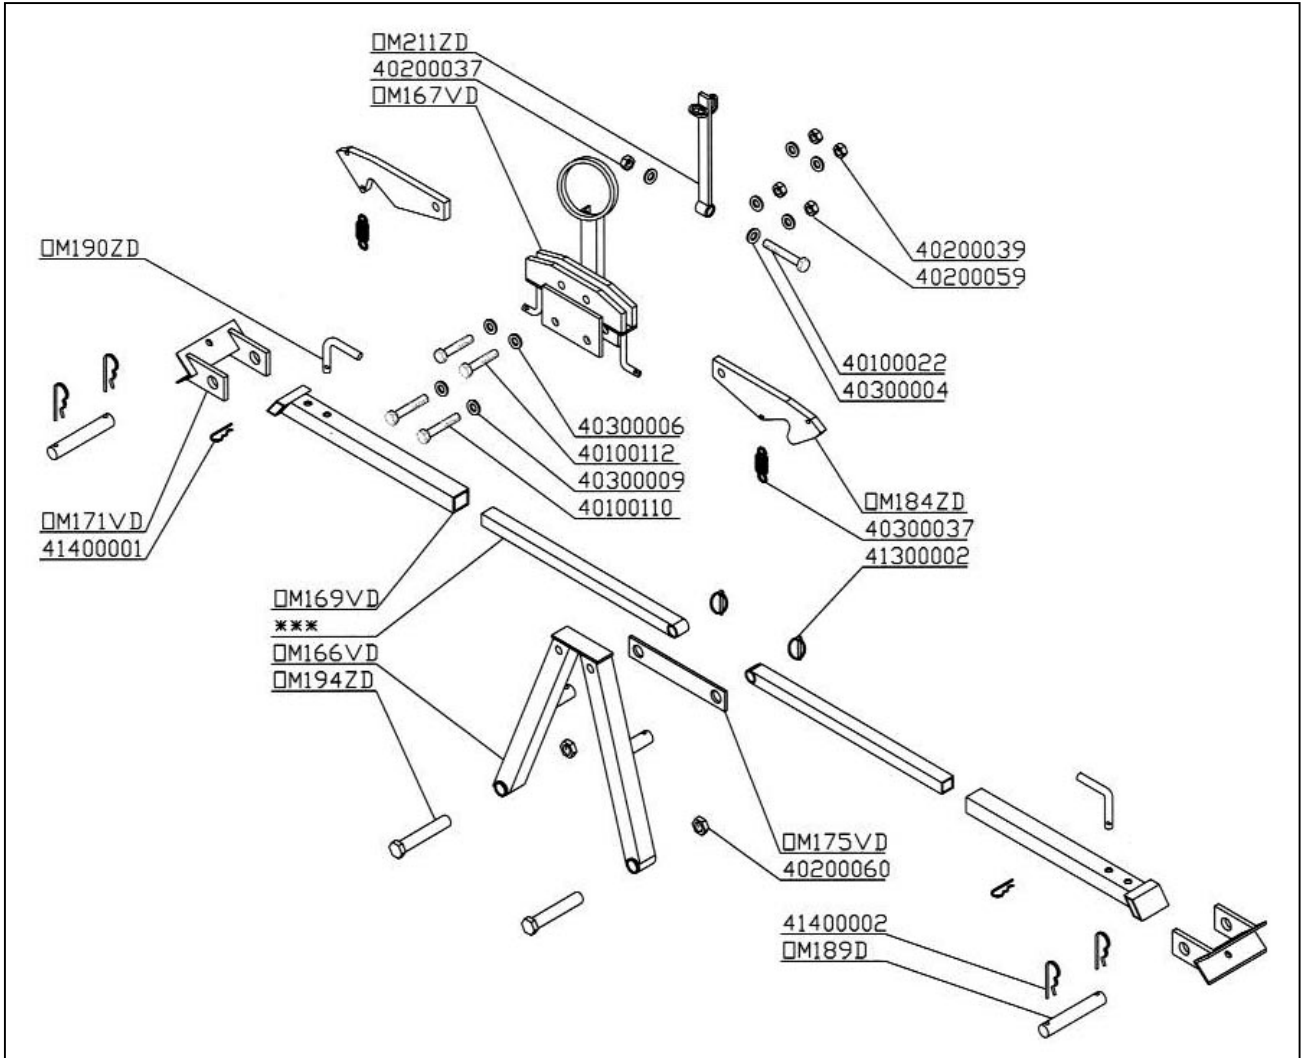 


BRACKET CODE							
Bracket code	OMEGA 11	OMEGA 12	OMEGA 14	OMEGA 15	OMEGA 17	OMEGA 19	OMEGA 21
***	OM170AVD	OM170BVD	OM170BVD	OM170CVD	OM170CVD	OM170DVD	OM170EVD

 REAR FRAME COMPONENTS

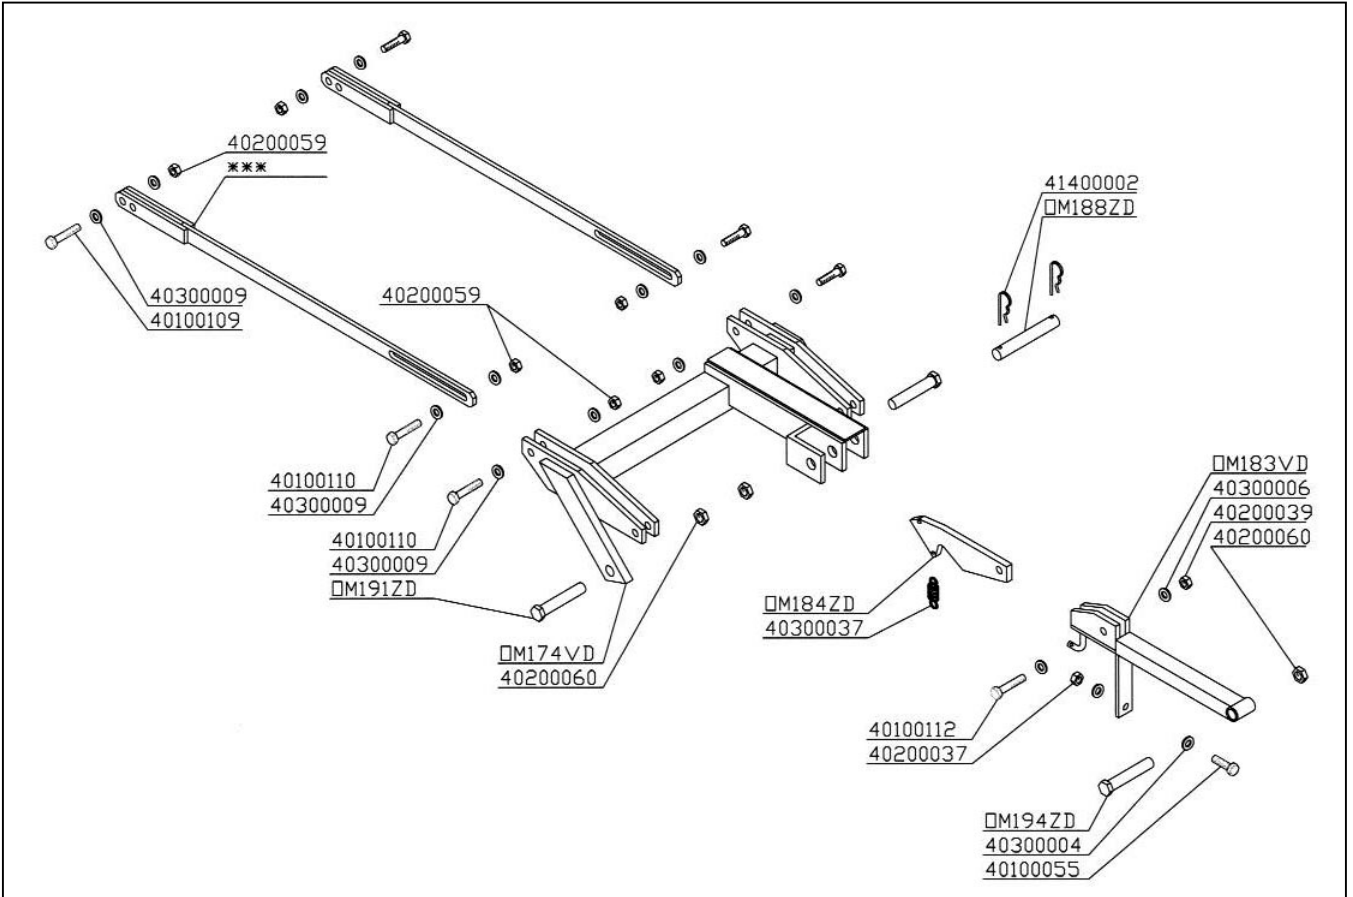


BRACKET CODE							
Bracket code	OMEGA 11	OMEGA 12	OMEGA 14	OMEGA 15	OMEGA 17	OMEGA 19	OMEGA 21
***	OM182AVD	OM182BVD	OM182BVD	OM182CVD	OM182CVD	OM182DVD	OM182DVD

 LEFT SIDE FRAME COMPONENTS

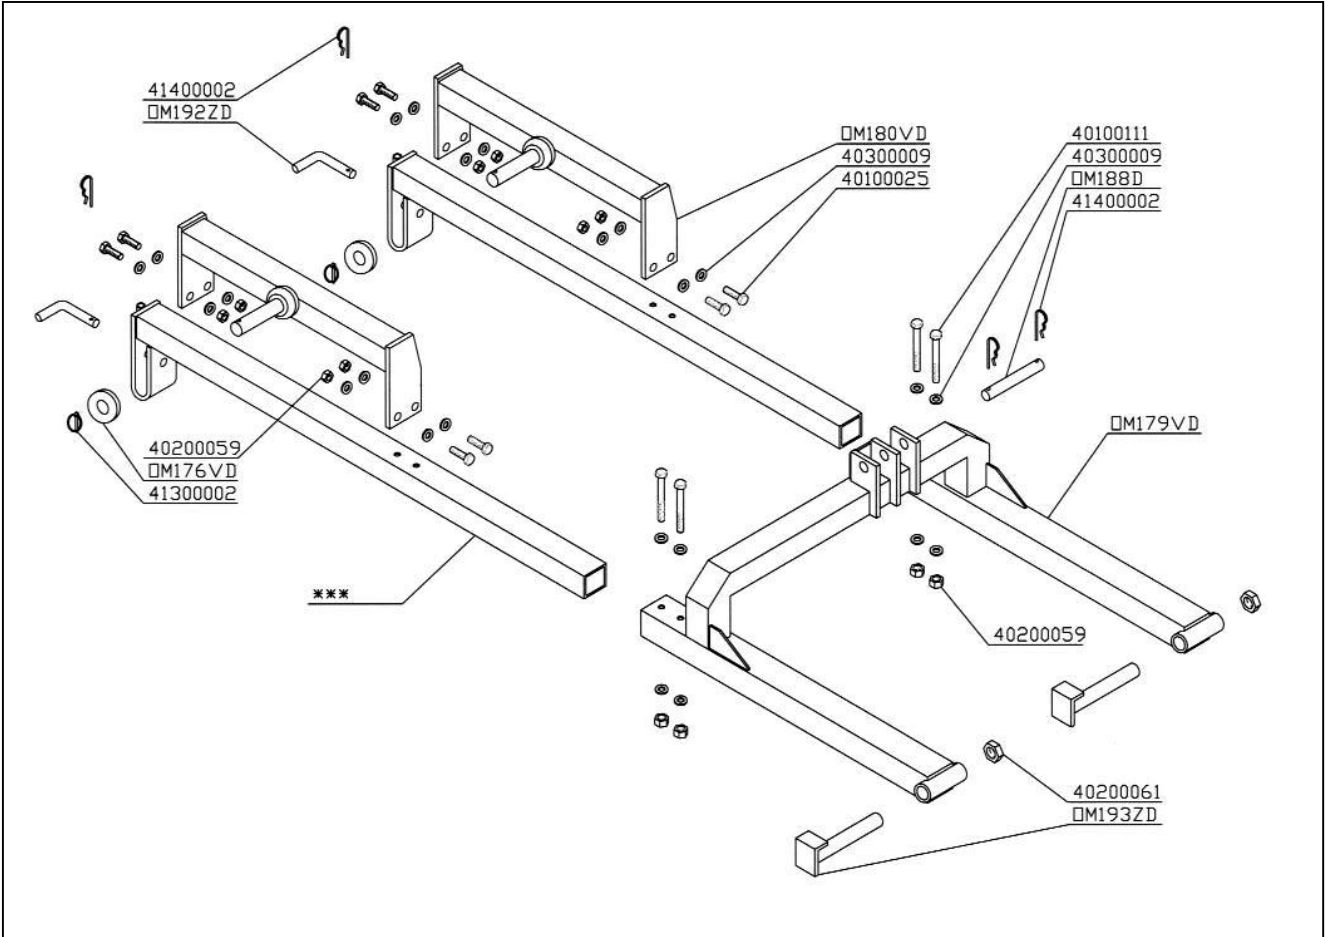


ARM CODE							
Arm code	OMEGA 11	OMEGA 12	OMEGA 14	OMEGA 15	OMEGA 17	OMEGA 19	OMEGA 21
***	OM181AVD	OM181BVD	OM181CVD	OM181DVD	OM181EVD	OM181FVD	OM181GVD

 RIGHT SIDE FRAME COMPONENTS

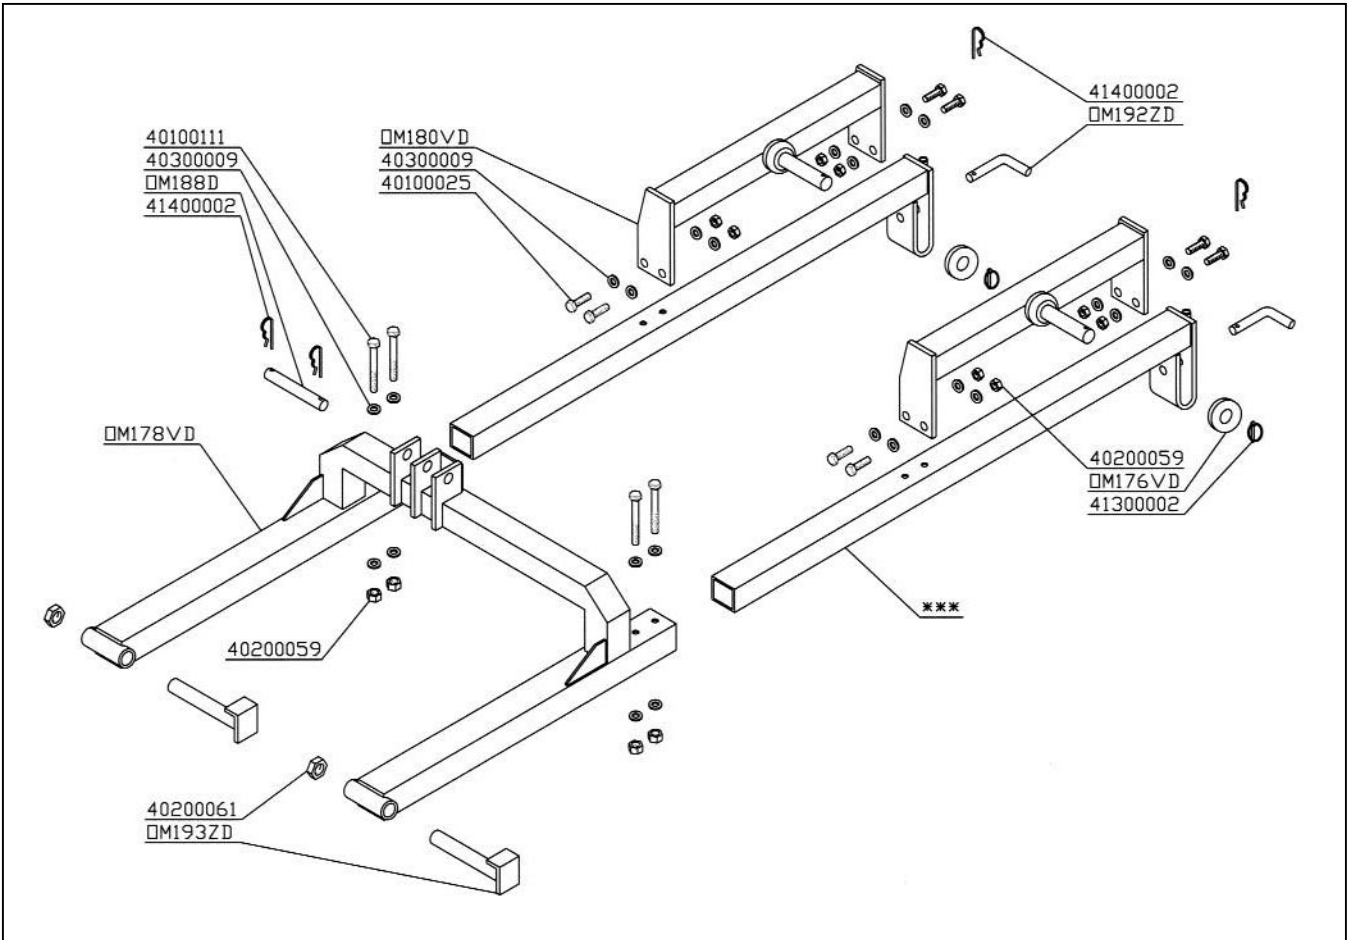

ARM CODE							
Arm code	OMEGA 11	OMEGA 12	OMEGA 14	OMEGA 15	OMEGA 17	OMEGA 19	OMEGA 21
***	OM181AVD	OM181BVD	OM181CVD	OM181DVD	OM181EVD	OM181FVD	OM181GVD

 MAIN FRAME TRANSMISSION

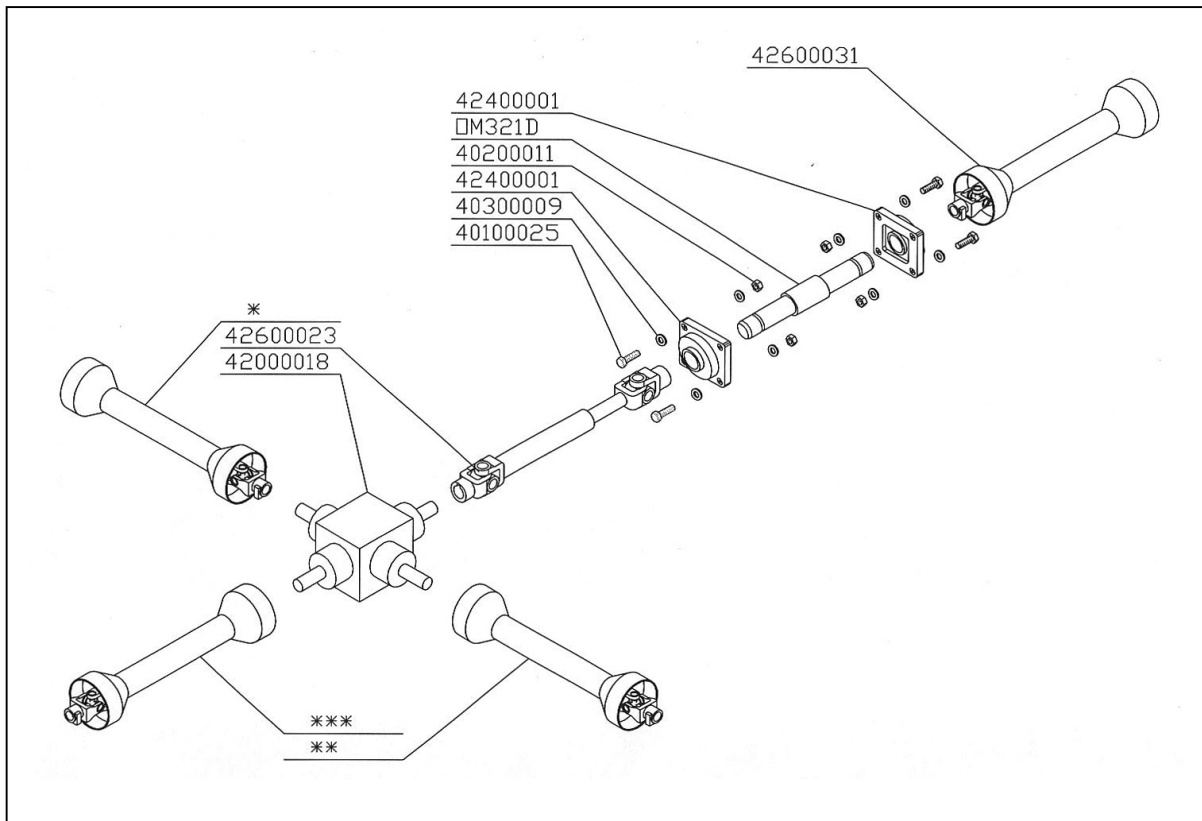


CODE FOR RIGHT SIDE – LEFT SIDE – REAR WIDE ANGLE CARDAN SHAFT MOWER WITH WHEELS Ø 210							
Cardan code	OMEGA 11	OMEGA 12	OMEGA 14	OMEGA 15	OMEGA 17	OMEGA 19	OMEGA 21
Left *	42600088	42600039	42600076	42600040	42600041	42600042	42600099
Right **	42600088	42600039	42600076	42600040	42600041	42600042	42600099
Rear ***	42600041	42600041	42600041	42600041	42600041	42600040	42600040

CODE FOR RIGHT SIDE – LEFT SIDE – REAR WIDE ANGLE CARDAN SHAFT MOWER WITH WHEELS Ø 310 E Ø 330							
Cardan code	OMEGA 11	OMEGA 12	OMEGA 14	OMEGA 15	OMEGA 17	OMEGA 19	OMEGA 21
Left *	42600088	42600039	42600076	42600040	42600041	42600042	42600099
Right **	42600088	42600039	42600076	42600040	42600041	42600042	42600099
Rear ***	42600099	42600099	42600099	42600099	42600099	42600042	42600042

NOTE : if you want that the clutch cardan shaft that connect the Omega with the tractor should be also wide angle, you must change the code 42600031 into 42600048.

 HYDRAULIC PLANT COMPONENTS

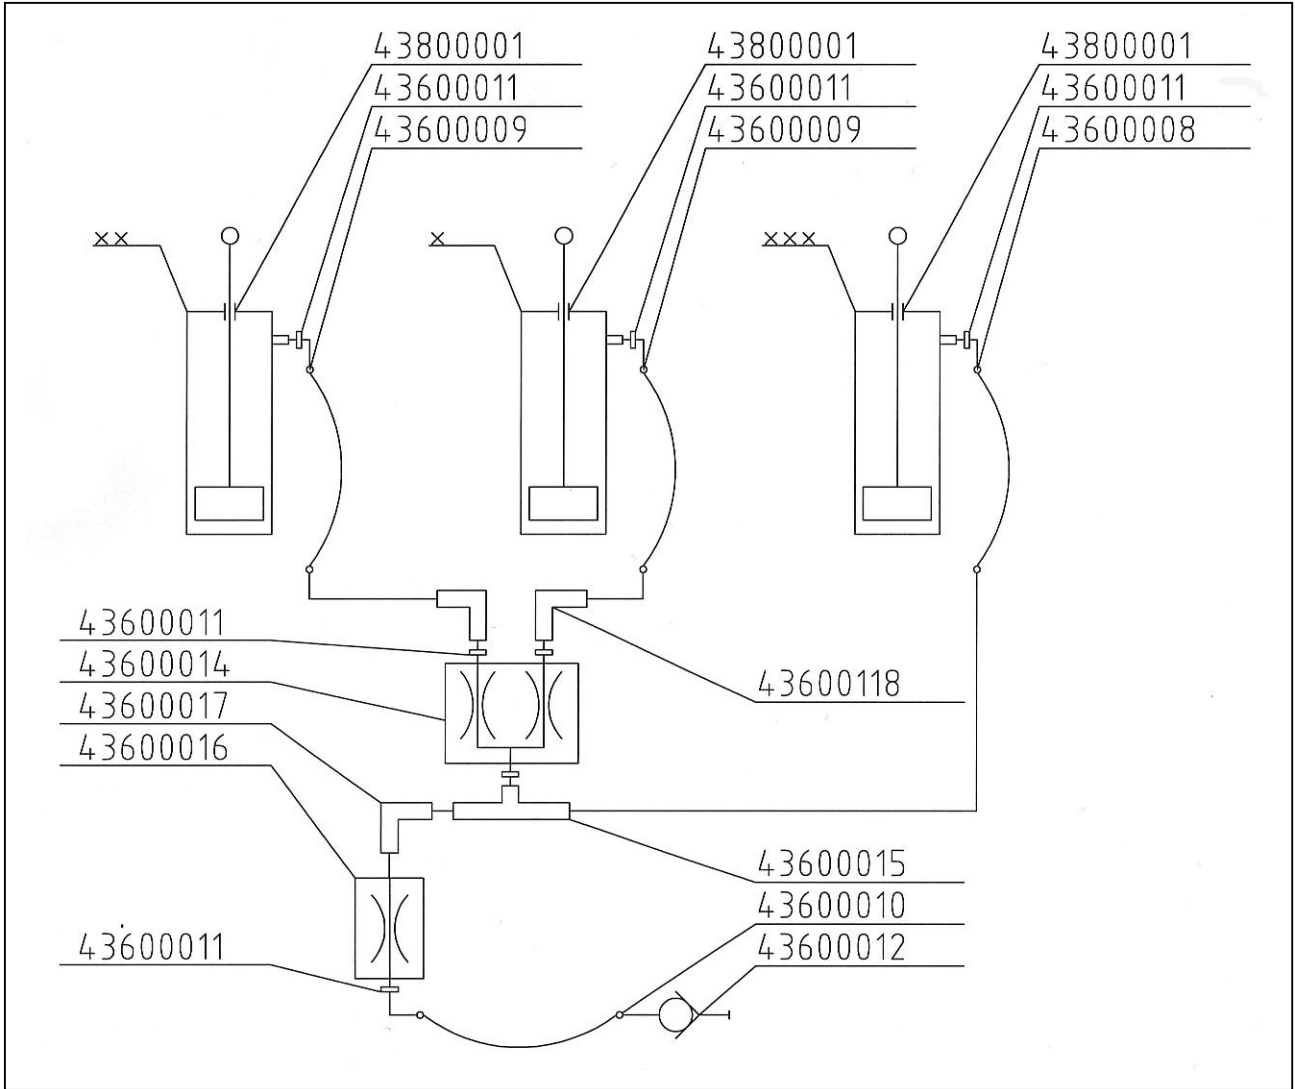


- * : Left hydraulic cilinder
- ** : Right hydraulic cilinder
- *** : Rear hydr

GENERAL INDEX


PREFACE	2
DESCRIPTION	3
FUNCTION OF USE	3
PERFORMANCES	3
PERFORMANCES LIMITS	3
STANDARD EQUIPMENT	3
VARIANTS & OPTIONS	3
SAFETY DEVICES	4
TECHNICAL SPECIFICATIONS	4
DRAW-HOOK OF THE TRACTOR	4
CHARACTERISTICS PER MODEL	4
SAFETY INFORMATIONS	5
GENERAL REGULATIONS	5
SAFETY RESTRICTIONS	5
SAFETY SIGNS ON THE MACHINE	6
ASSEMBLING INSTRUCTIONS	7
1. MAIN FRAME "1"ASSEMBLING	10
2. MOUNTING RIGHT CUTTING COMPONENT "8"	11
3. MOUNTING LEFT CUTTING COMPONENT "9"	11
4. MOUNTING REAR CUTTING CUTTING COMPONENT "7"	11
5. MOUNTING RIGHT CUTTING COMPONENT ON MAIN FRAME	11
6. MOUNTING LEFT CUTTING COMPONENT ON MAIN FRAME	11
7. MOUNTING REAR CUTTING COMPONENT ON MAIN FRAME	12
8. FINAL ASSEMBLING	12
9. GREASING AND LUBRICATION	12
INSRTRUCTION FOR USE	13
1. BEFORE BEGINNING WORK	13
2. TO BEGINNING WORK	14
3. AT THE END OF WORK	14
MAINTENANCE INSTRUCTIONS	15
DIAGRAM "A" SCHEDULED MAINTENANCE	15
1. FRAME GREASING	16
2. FRAME GEAR BOX OIL SUBSTITUTION	16
3. MOWERS GREASING	17
4. MOWERS OIL CECK – OIL SUSTITUTION	17
5. BELTS ADJUSTING AND SUBSTITUTION	18
6. BLADES SUBSTITUTION	19
PROBLEMS SOLVING	20
TRANSPORT	21
STORAGE	21
INFORMATION ON DEMOLITION	21
WARRANTY	21
WORK AND MAINTENANCE SHEET	22
120-150-180-215 MOWERS FRAME COMPONENTS	24

120-150-180-215 MOWERS TRANSMISSION.....	25
235 MOWER FRAME COMPONENTS.....	26
235 MOWER TRANSMISSION	27
WHEELS AND FRONT ROLL SPARE PARTS	28
CENTRAL LUBRICATION COMPONENTS	29
MAIN FRAME COMPONENTS	30
SAFETY SIDE DEVICE COMPONENTS.....	31
REAR FRAME COMPONENTS	32
LEFT SIDE FRAME COMPONENTS	33
RIGHT SIDE FRAME COMPONENTS.....	34
MAIN FRAME TRANSMISSION	35
HYDRAULIC PLANT COMPONENTS.....	36

 
MOWER TYPE XRM0 235
 SPARE PARTS DRAWING
 DETAIL "A"

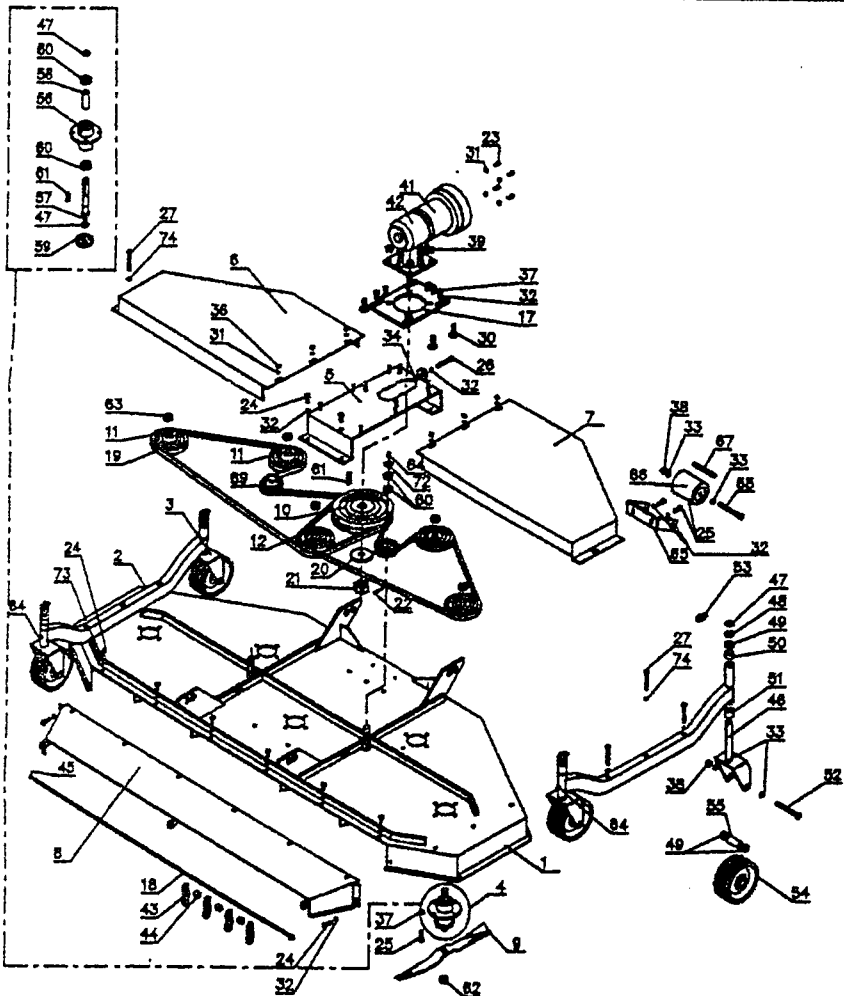


OPTION - TYRE WHEELS

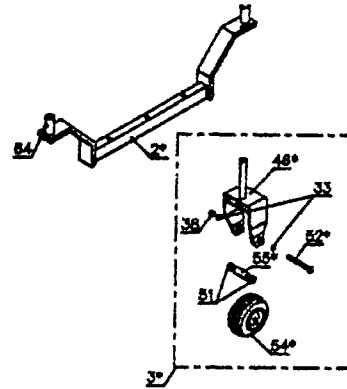 

 
OPTION-DECK WITH DISCHARGE "NOT WIND ROW"

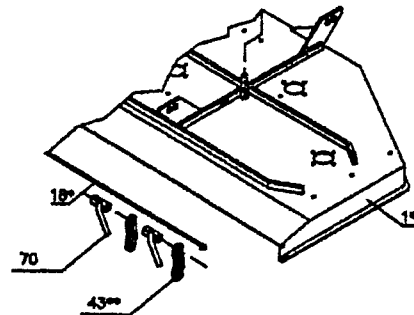

 
MOWER TYPE PRMO 120-150-180
 SPARE PARTS DRAWING
 DETAIL "A"

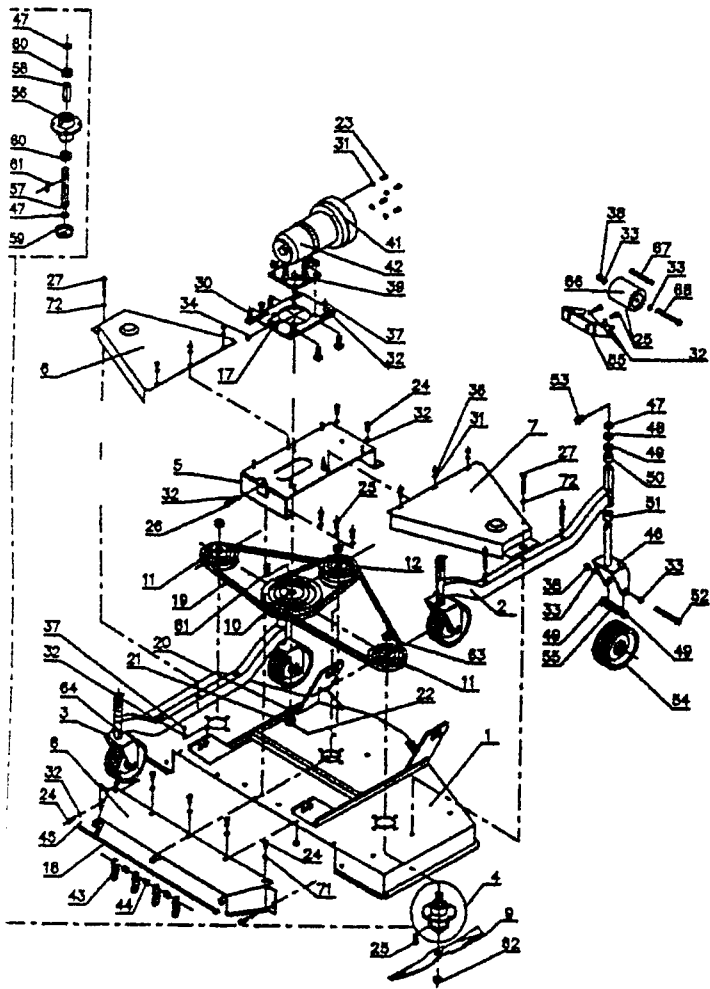


OPTION - TYRE WHEELS

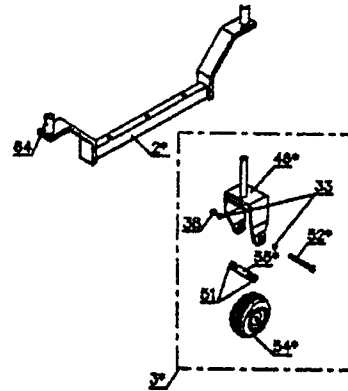 

  
OPTION-DECK WITH DISCHARGE " NOT WIND ROW "

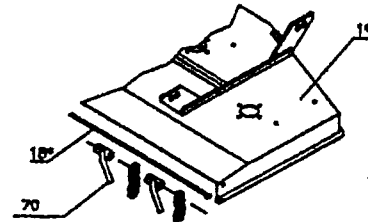


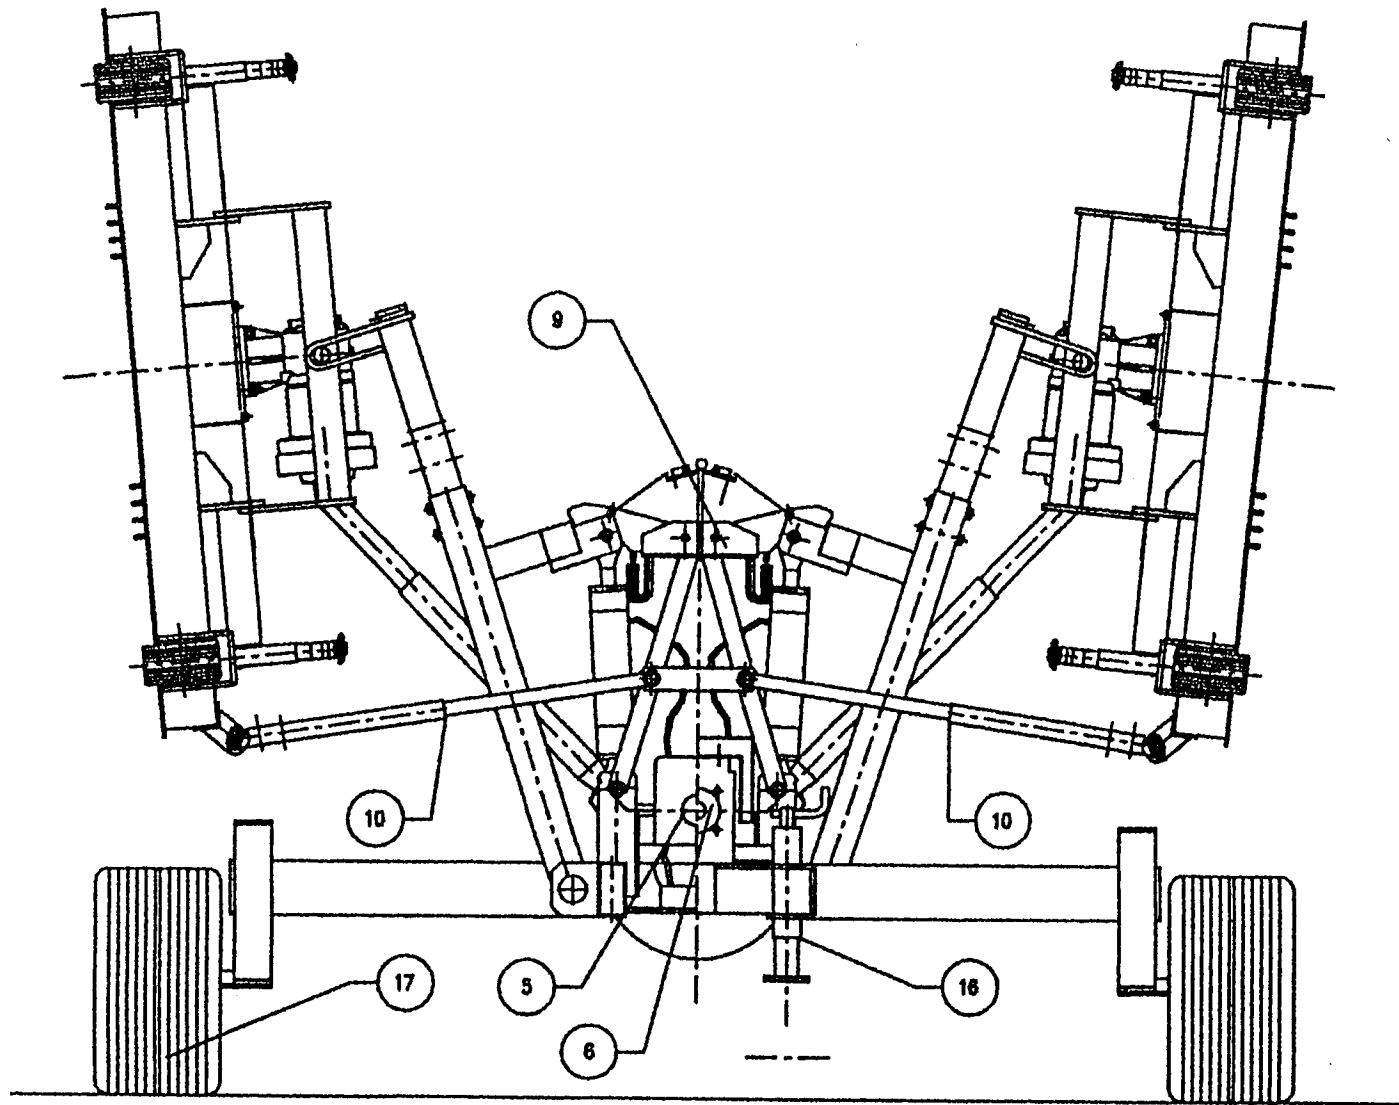


MODEL	SIDE MOWER	REAR MOWER	CUT W. - H - mm
	20+21	19	
OMEGA 11	PRMO 120	PRMO 120	3300
OMEGA 12	PRMO 120	PRMO 150	3600
OMEGA 14	PRMO 150	PRMO 150	4200
OMEGA 15	PRMO 150	PRMO 180	4500
OMEGA 17	PRMO 180	PRMO 180	5100
OMEGA 19	PRMO 180	XRMO 235	5800

FOR DETAILS OF POSITIONS 19-20-21 SEE DETAILS "A" AND "B"
 FOR DETAILS ON FRAME AND MOWERS PARTS SEE "FRAME" "PRMO" "XR"
 SPARE PARTS LIST AND SUGGESTED SPARE PARTS LIST

		Dis. Ng	Spl3001	
	Denominazione OMEGA		Codice	
	SPARE PARTS DRAWING		q.tà	---
	Gruppo		Secc	---

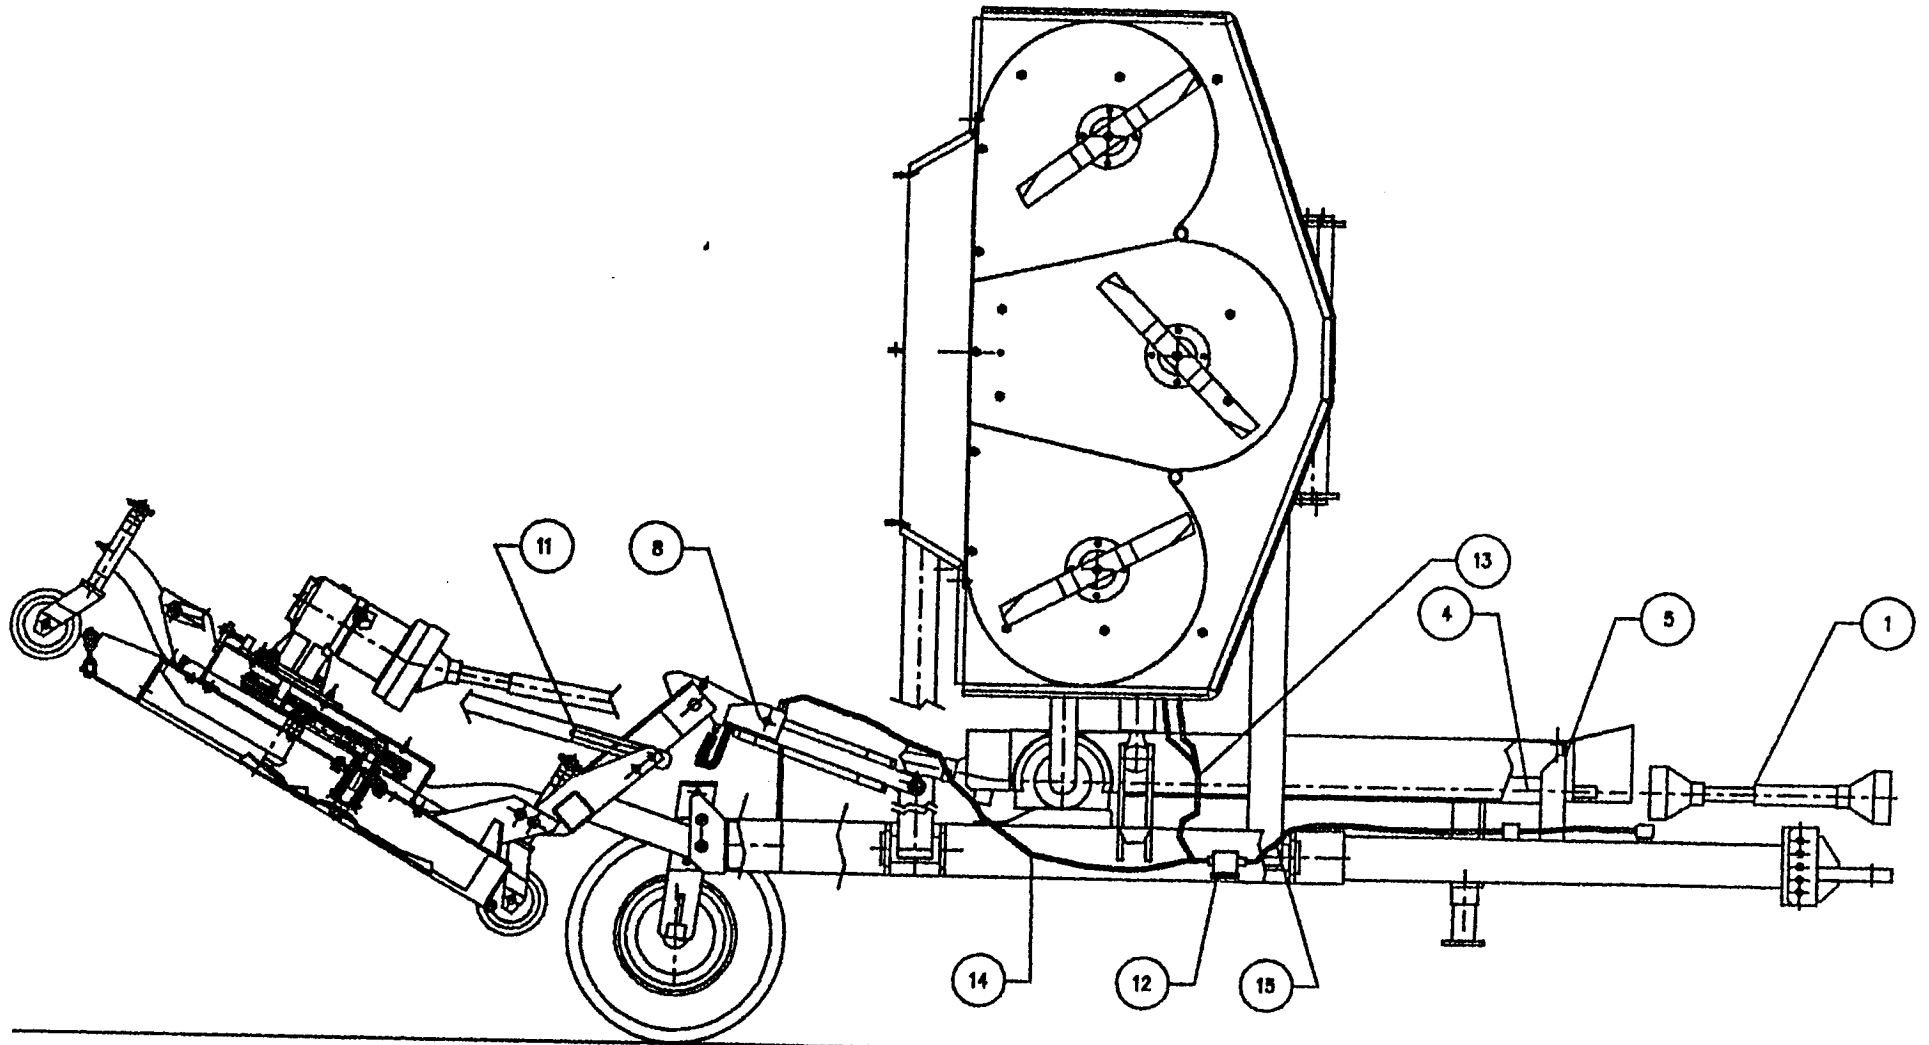 

OMEGA IN WORKING POSITION

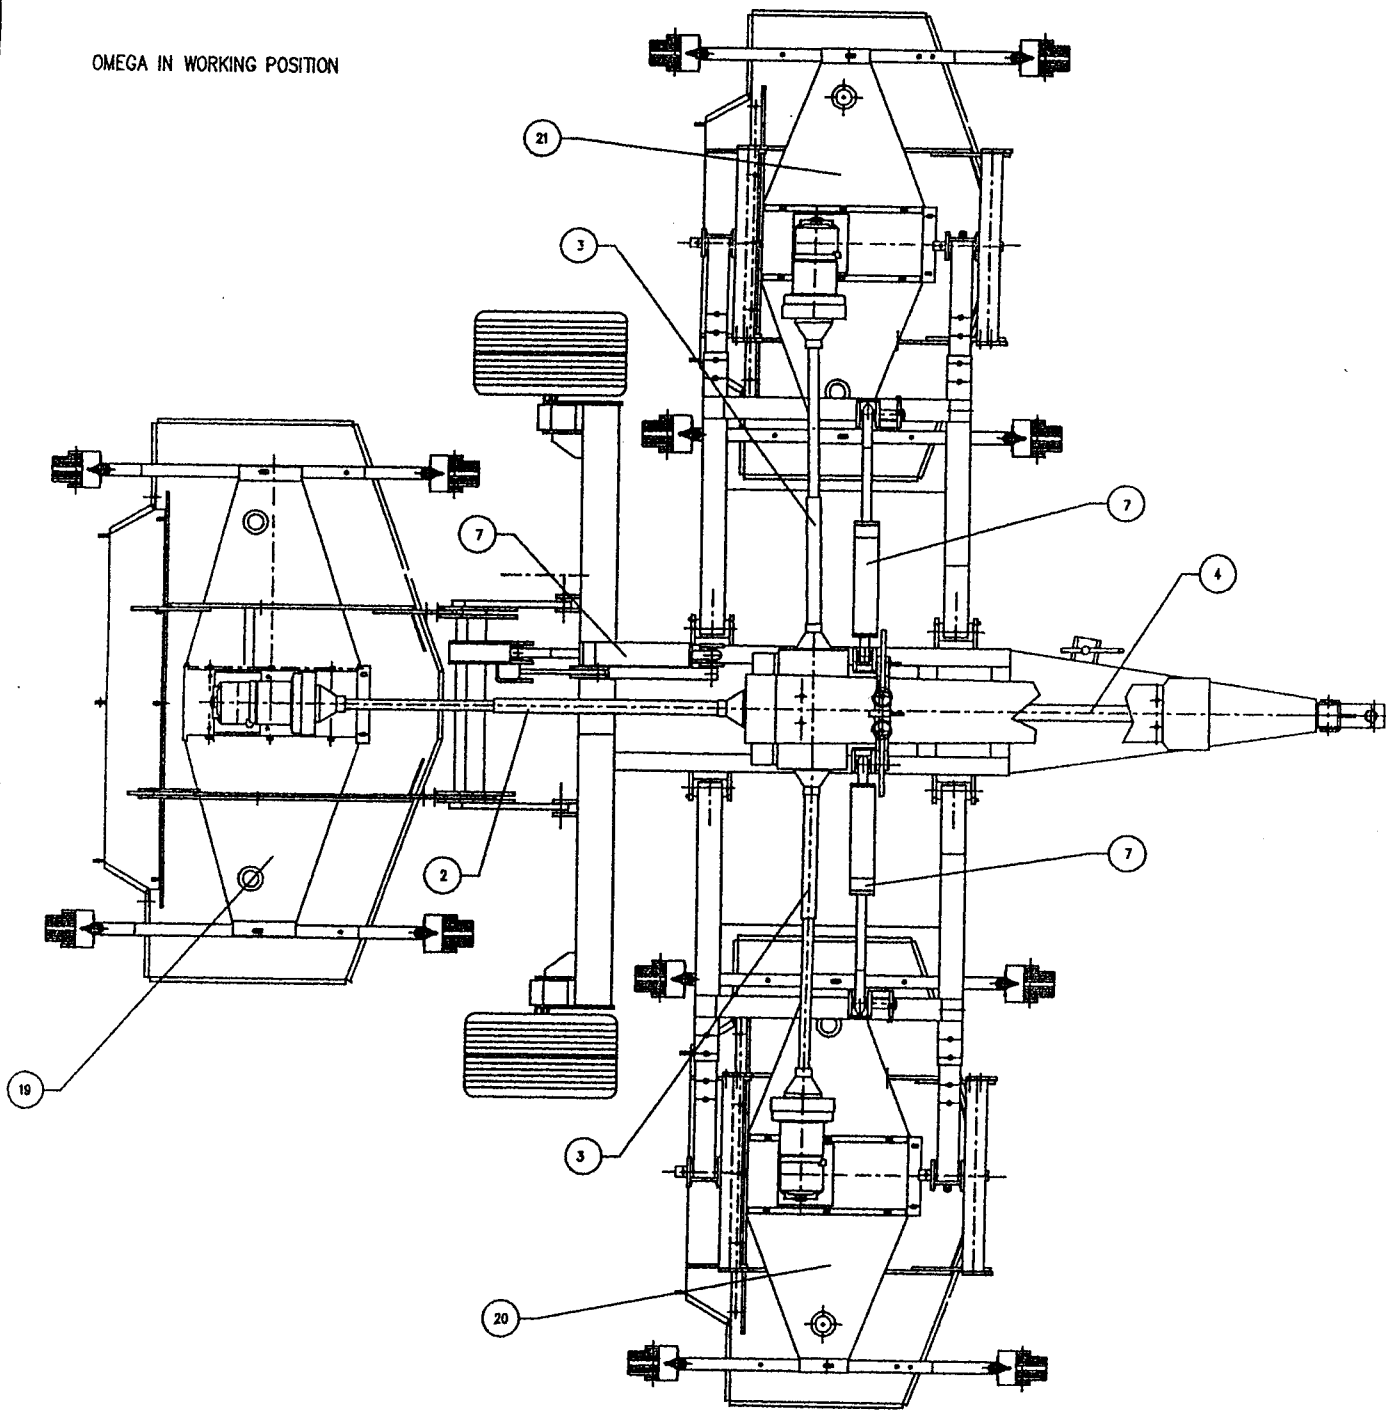 

HOOK TYPE "AMERICA"

HOOK TYPE "EUROPA"


 
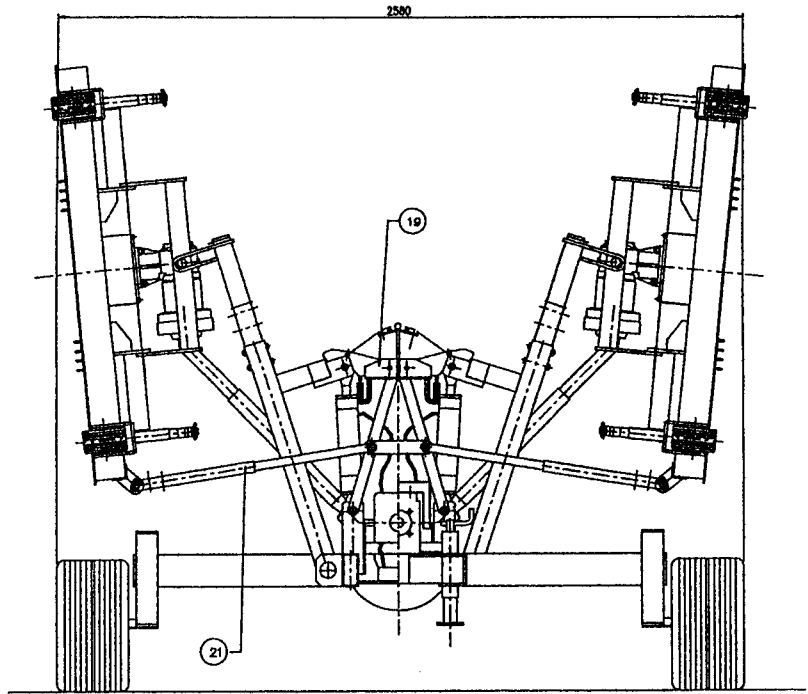 


TABLE "A"


WHEEL GROUP 11	HUB 2 ADJUSTMENT
RUBBER	POSITION 1
TYRE	POSITION 2

TABLE "B"

MODEL	MOWER 8+9	MOWER 7	CUT W. - H - mm	DISTANCE l mm
OMEGA 11	PRM 120	PRM 120	3300	985
OMEGA 12	PRM 120	PRM 180	3600	985
OMEGA 14	PRM 150	PRM 150	4200	1115
OMEGA 15	PRM 150	PRM 180	4300	1285
OMEGA 17	PRM 180	PRM 180	5100	1415
OMEGA 19	PRM 180	XRM 235	5600	1690

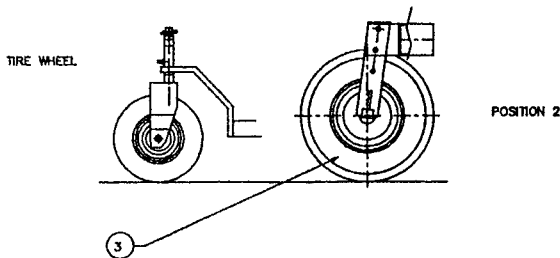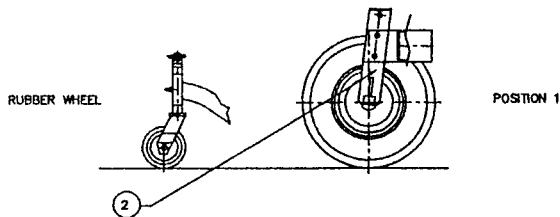 


28	REAR HYDRAULIC PIPE		1
27	SIDE HYDRAULIC PIPE		2
26	HOOK		1
25	POWER DRIVING GROUP CARTER		1
24	POWER CARDAN JOINT		1
23	REAR CARDAN JOINT		1
22	SIDE CARDAN JOINT		2
21	SIDE END STROKE ROD		2
20	REAR SAFETY DEVICE		1
19	SIDE SAFETY DEVICE		1
18	HYDRAULIC RAM		3
17	REAR END STROKE ROD		2
16	REAR CONNECTION FRAME		1
15	SIDE CONNECTION BEAM		4
14	SIDE CONNECTION BRACKET		4
13	CASING		3
12	DISCHARGE CARTER		3
11	MOWER WHEEL GROUP		12
10	CROSS BAR WHEEL CASE		6
9	LEFT SIDE MOWER		1
8	RIGHT SIDE MOWER		1
7	REAR MOWER		1
6	LEFT SIDE CONNECTION FRAME		1
5	RIGHT SIDE CONNECTION FRAME		1
4	LIFTING JACK		1
3	REAR WHEEL		2
2	REAR HUB		2
1	MAIN FRAME		1

POS.	DESCRIPTION	DWG	Q.TY
		Dwg. N° OM-020-A-1	
		Codice	
		Denominazione OMEGA	
		ASSEMBLING DRAWING	
Gruppo		Scale 1:10	
INSIEME Dia. N° -- Partic. --		Stamp. Bord. A.	
		9/08/99	

C:\DISIGN\UNIOR\OMEGA\OMEGA

 2405

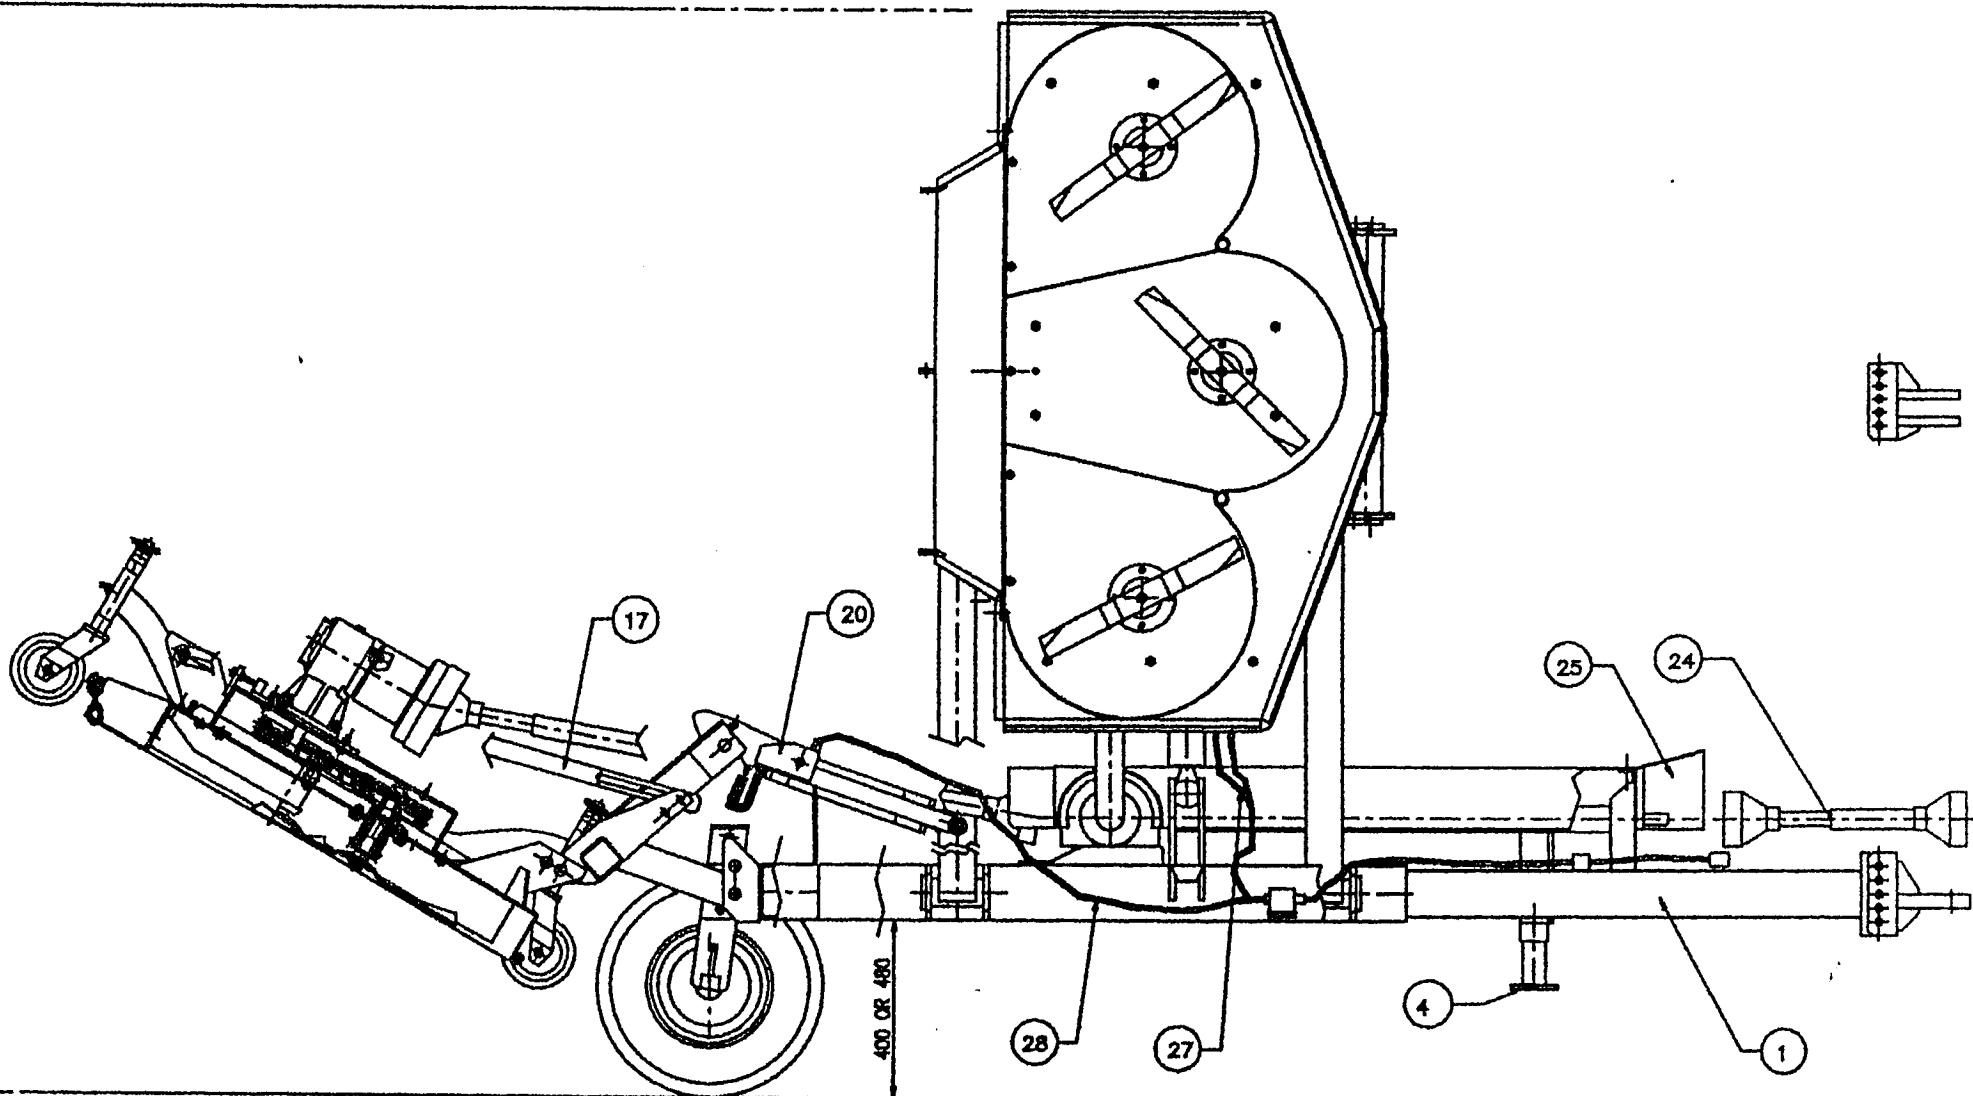

400 OR 480

OMEGA IN WORKING POSITION

