




YELLOWSTONE

96 - 114 - 132 - 150 - 168

Interrasassi
Stone Burier
Enfouisseuse

TRASMISSIONE - DRIVE TRAIN COMPONENTS - TRANSMISSION

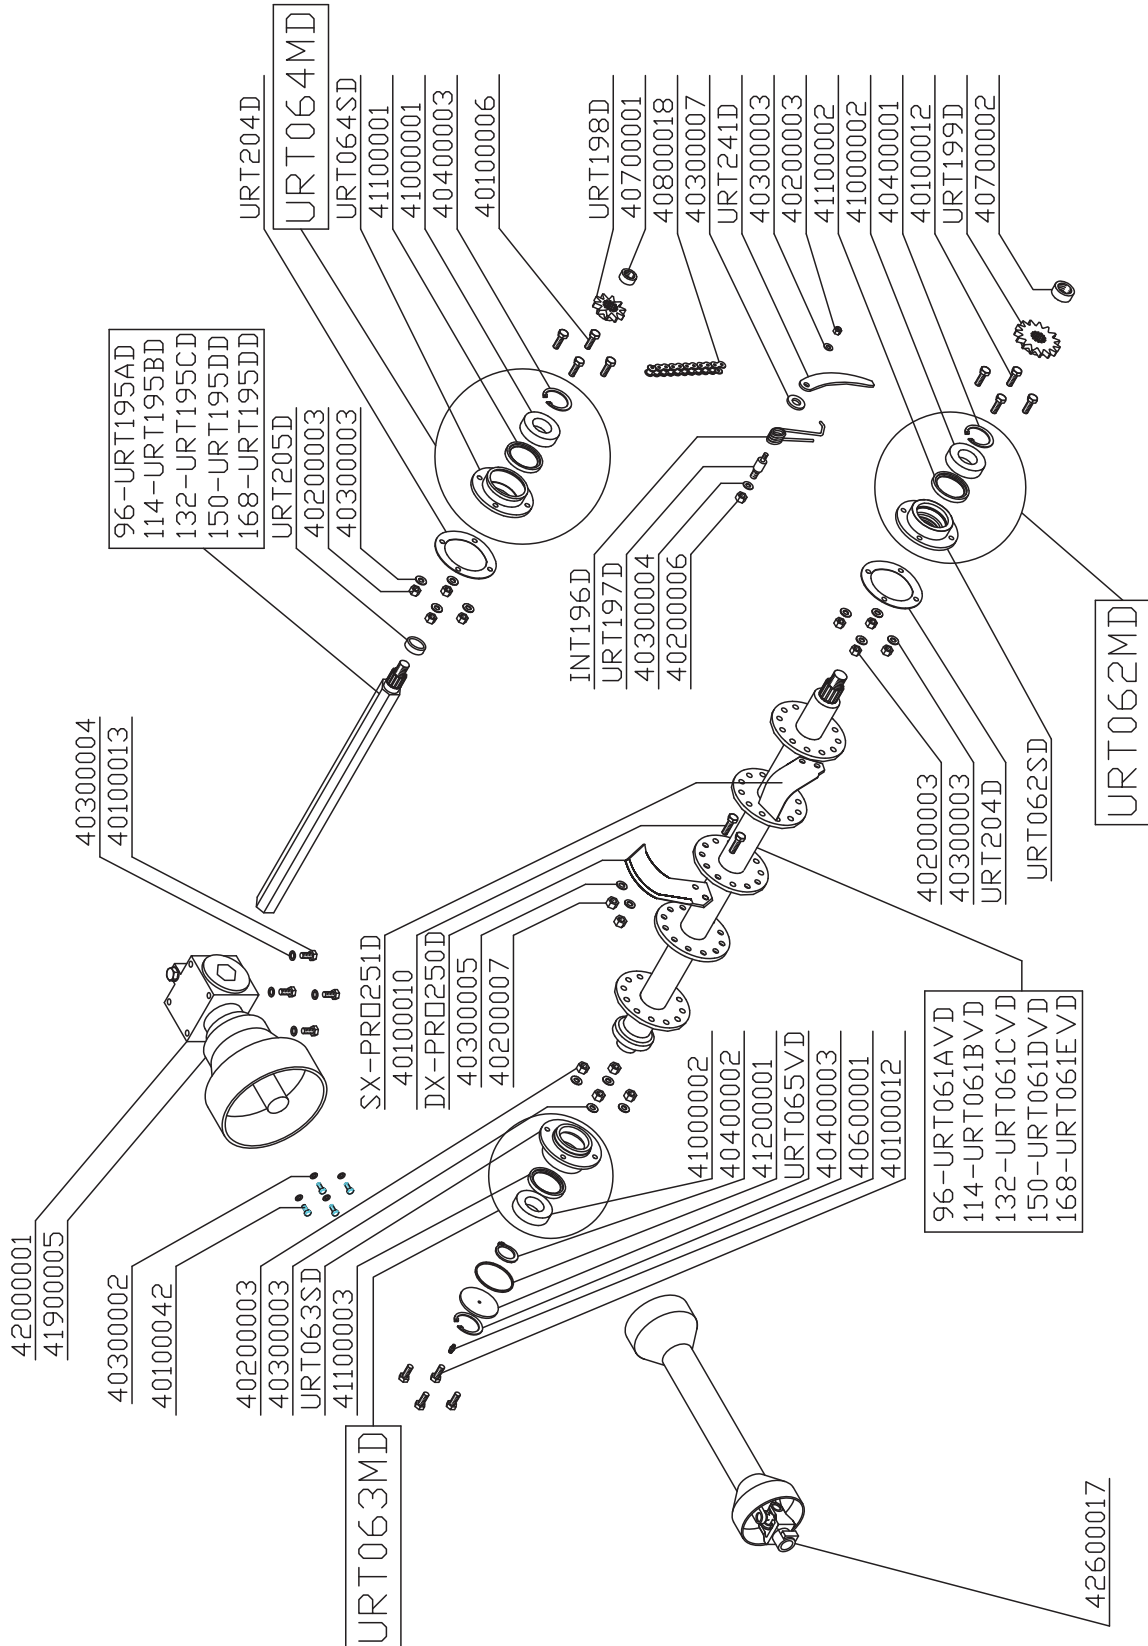




YELLOWSTONE

96 - 114 - 132 - 150 - 168

Interrasassi
Stone Burier
Enfouisseuse

TELAIO - FRAME - CHASSIS

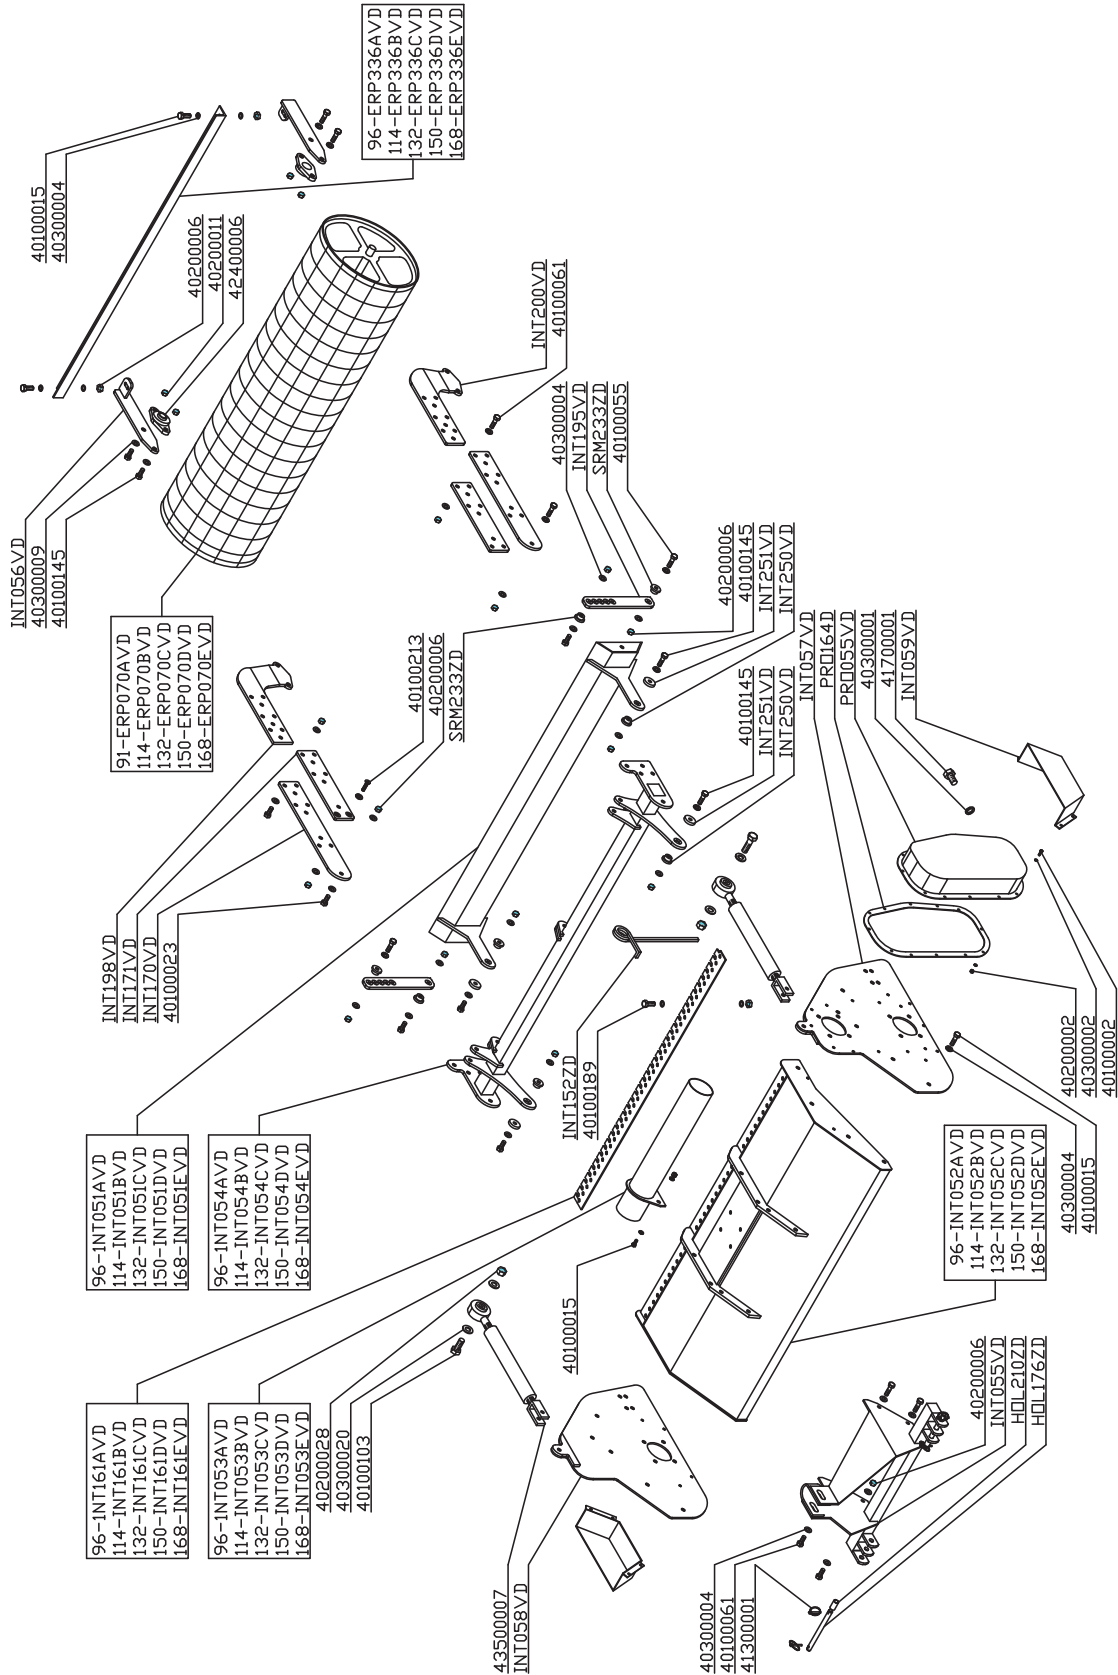




YELLOWSTONE

96 - 114 - 132 - 150 - 168

Interrasassi
Stone Burier
Enfouisseuse

SUPPORTO SEMINATRICE - SEEDER SUPPORT - SUPPORT SEMOIR

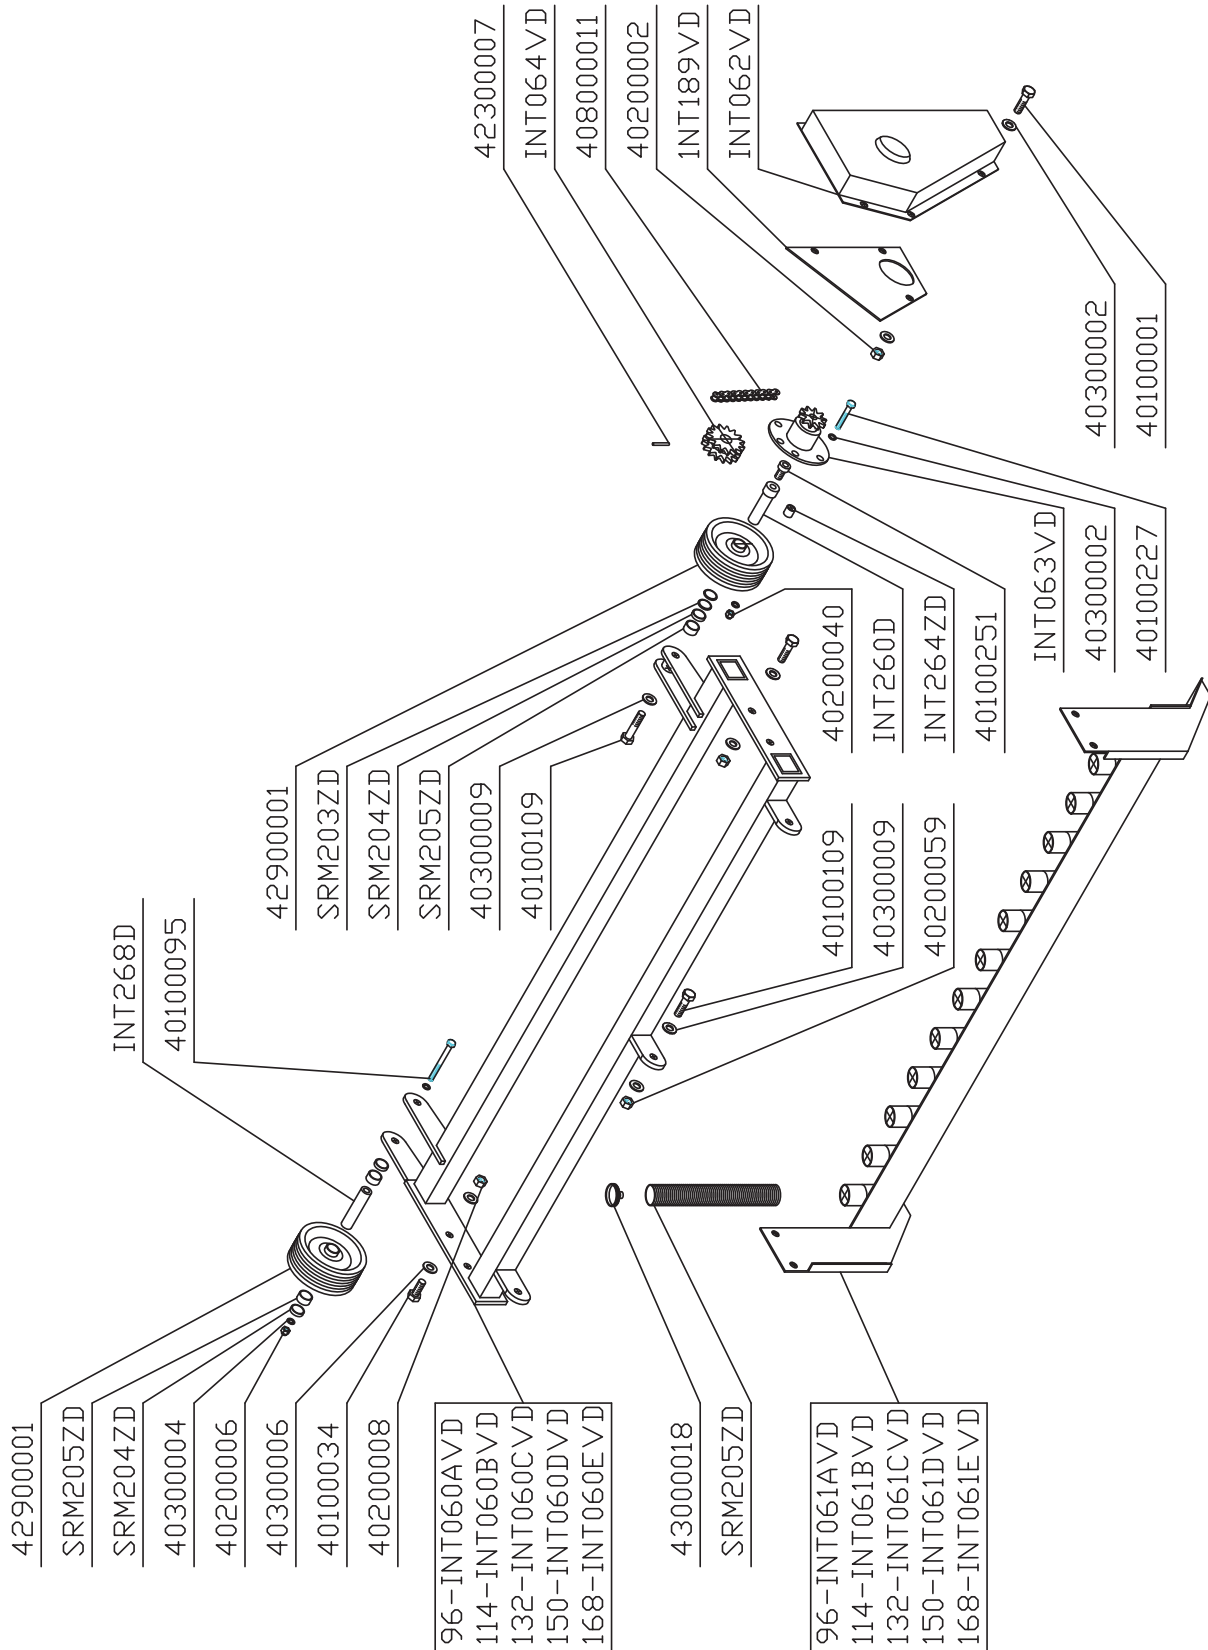





PROFESSIONAL (YELLOWSTONE)

Seminatrice
Seeder
Semoir

TRASMISSIONE - DRIVE TRAIN COMPONENTS - TRANSMISSION (PROFESSIONAL 11- 13- 15)

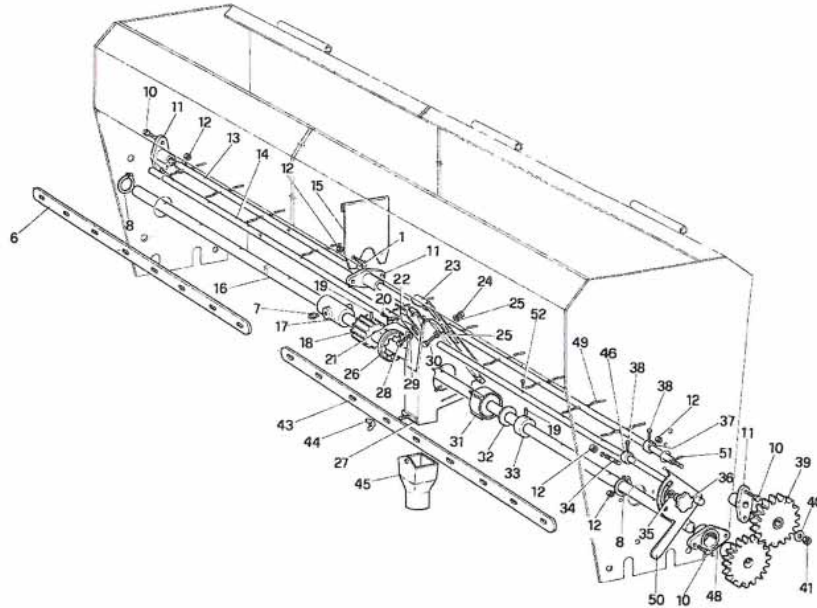

TELAIO SEMINATRICE - SEEDER FRAME - CHASSIS SEMOIR (PROFESSIONAL 11- 13- 15)

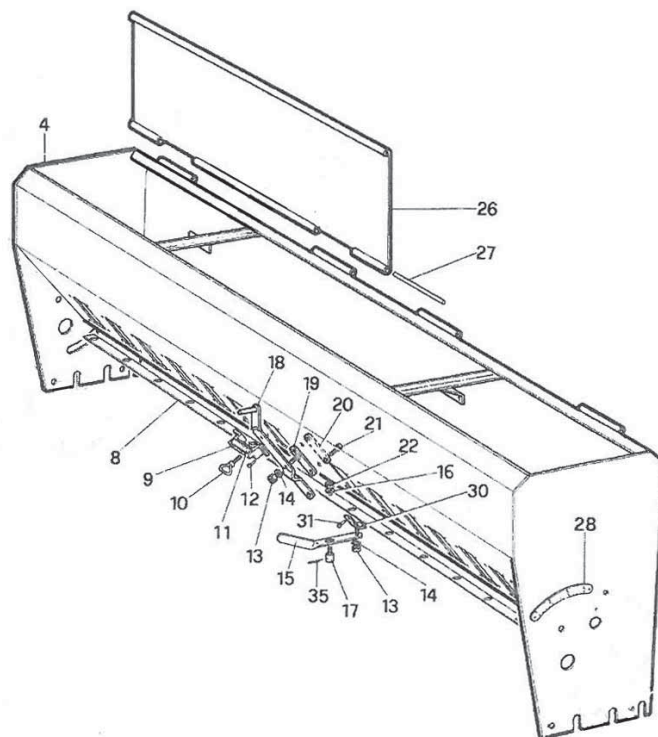




GRASS (YELLOWSTONE)

Seminatrice
Seeder
Semoir

ATTACCO SEMINATRICE - SEEDER LINKAGE - ATTELAGE SEMOIR (GRASS 90 - 100 - 120 - 140)

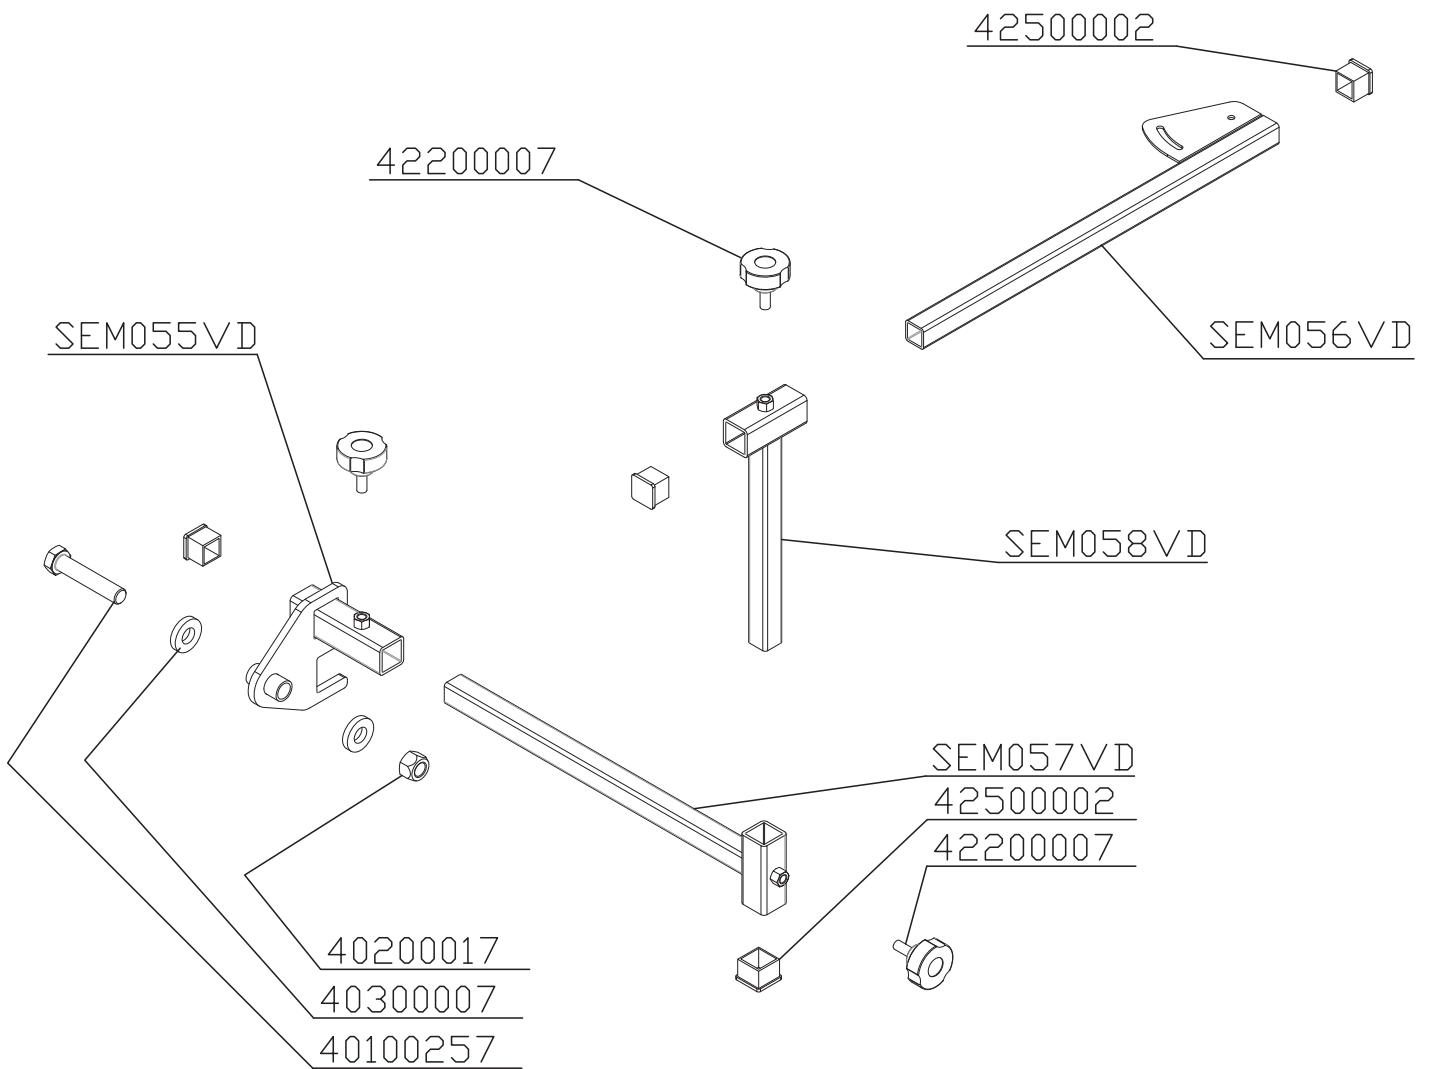




GRASS (YELLOWSTONE)

Seminatrice
Seeder
Semoir

TRASMISSIONE - DRIVE TRAIN COMPONENTS - TRANSMISSION (GRASS 90 - 100 - 120 - 140)

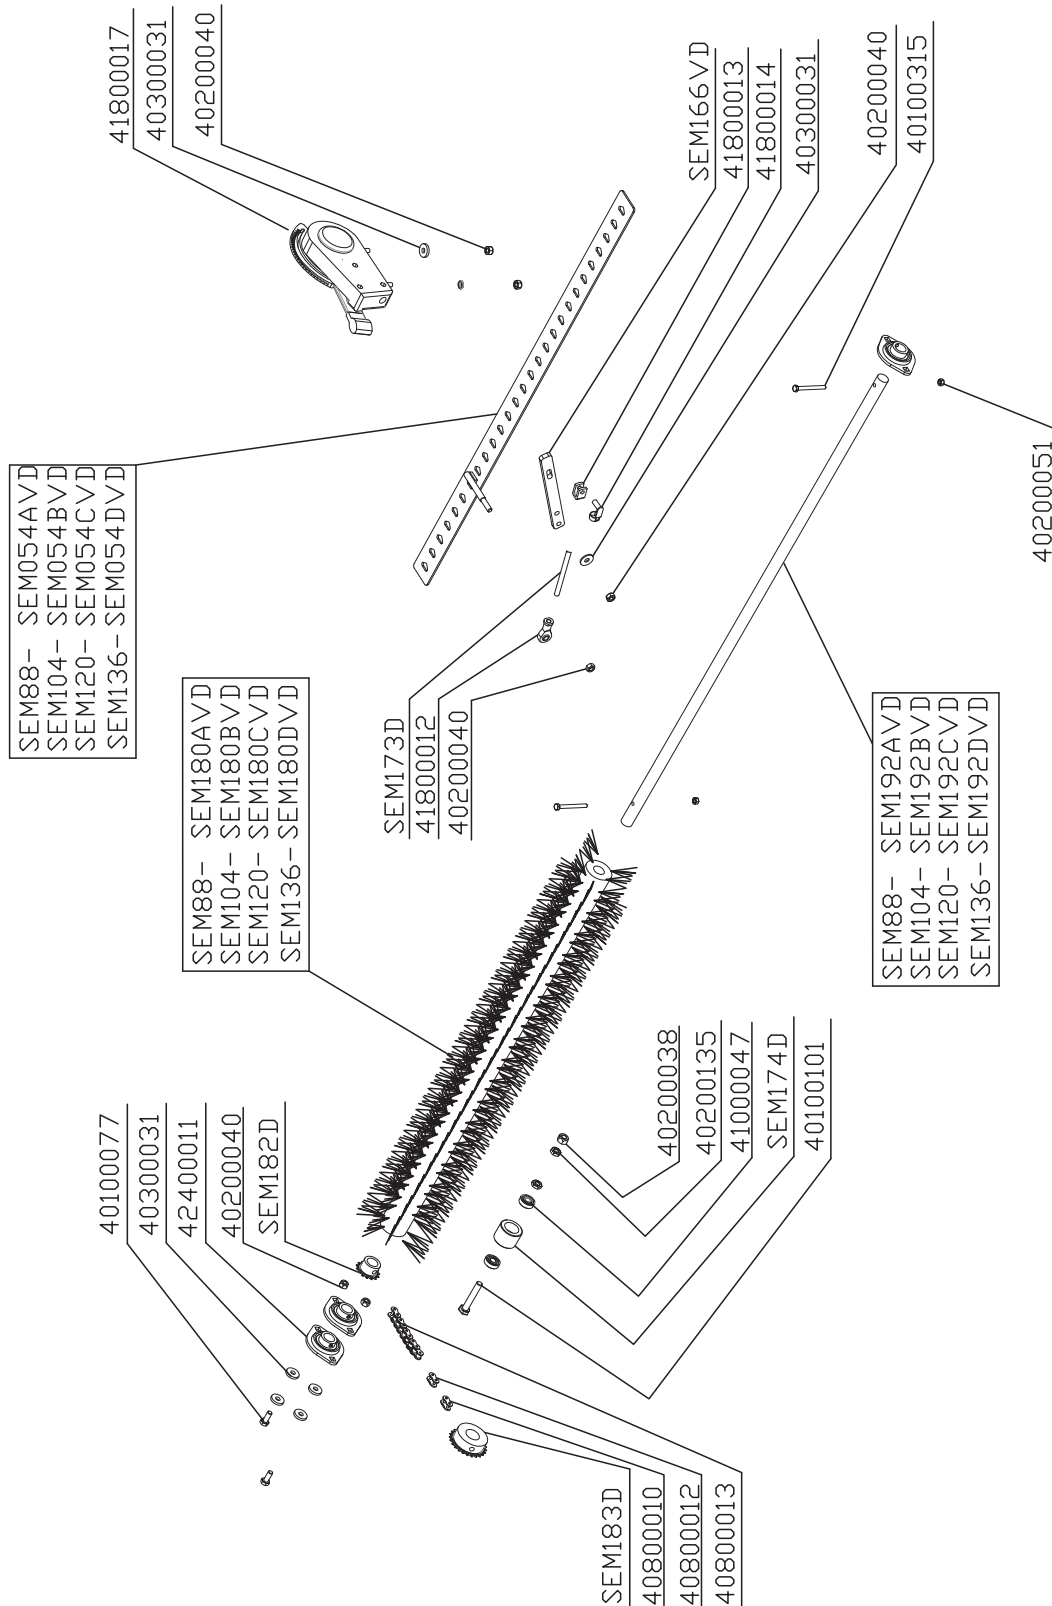



GRASS (YELLOWSTONE)

Seminatrice
Seeder
Semoir

TELAIO - FRAME - CHASSIS (GRASS 90 - 100 - 120 - 140)

