

TABLE OF SPARE GROUPS

ORDER OF SPARE PARTS

In your orders of spare parts always quote model, serial number and year of manufacture of your "SNOW BLADE", that can be found in the name plate of the Snow Blade.

NOTE

* *Use original spare parts only, to be ordered by sending a written request to Company Bonatti and specifying the code numbers and the description of the required spare parts.*

The Company Bonatti declines any liability in case no original spare parts are used.

LIST OF SPARE GROUPS FOR THE SNOW BLADE

<i>RIF.</i>	<i>DESCRIPTION</i>	<i>CODE</i>	<i>Q.TY</i>
<i>1</i>	<i>Coupling pin of the snow Blade to fixed support</i>	<i>B/1313</i>	<i>2-3</i>
<i>2</i>	<i>Positioning hydraulic cylinder</i>	<i>B/1314</i>	<i>2</i>
<i>3</i>	<i>Fulcrum pin for blade positioning with lock split pin</i>	<i>B/1315</i>	<i>1</i>
<i>4</i>	<i>Hydraulic cylinder fulcrum pin with lock split pin</i>	<i>B/1316</i>	<i>4</i>
<i>5</i>	<i>Shockproof spring</i>	<i>B/1317</i>	<i>2-8</i>
<i>6</i>	<i>Flexible hydraulic pipes provided with explosion-proof sheath</i>	<i>B/1318</i>	<i>2</i>
<i>7</i>	<i>Stabilizing foot</i>	<i>B/1319</i>	<i>1</i>

TABLE OF SPARE GROUPS

