

DRIVING SPEED

- ※ The tractor's speed is changed by the condition of the tires and road surface.
- ※ To ensure safety, drive at a proper speed.

Engine speed: 2,600 rpm, Tire SLR : 596 mm(Rear 13.6-26)

RANGE		A				B				C			
		1	2	3	4	1	2	3	4	1	2	3	4
MEC MODEL	FORWARD	1.9	2.1	2.9	4.1	4.5	5.3	7.1	10.0	13.8	16.1	21.7	30.5
	BACKWARD	1.8	2.1	2.8	3.9	4.3	5.1	6.8	9.6	13.1	15.5	20.7	29.2

RANGE		A				B				C			
		1	2	3	4	1	2	3	4	1	2	3	4
HST MODEL	FORWARD	4.1				10.0				30.5			
	BACKWARD	4.1				10.0				30.5			