


Cippo 7 - Spare parts



Cippo 7 - Spare parts

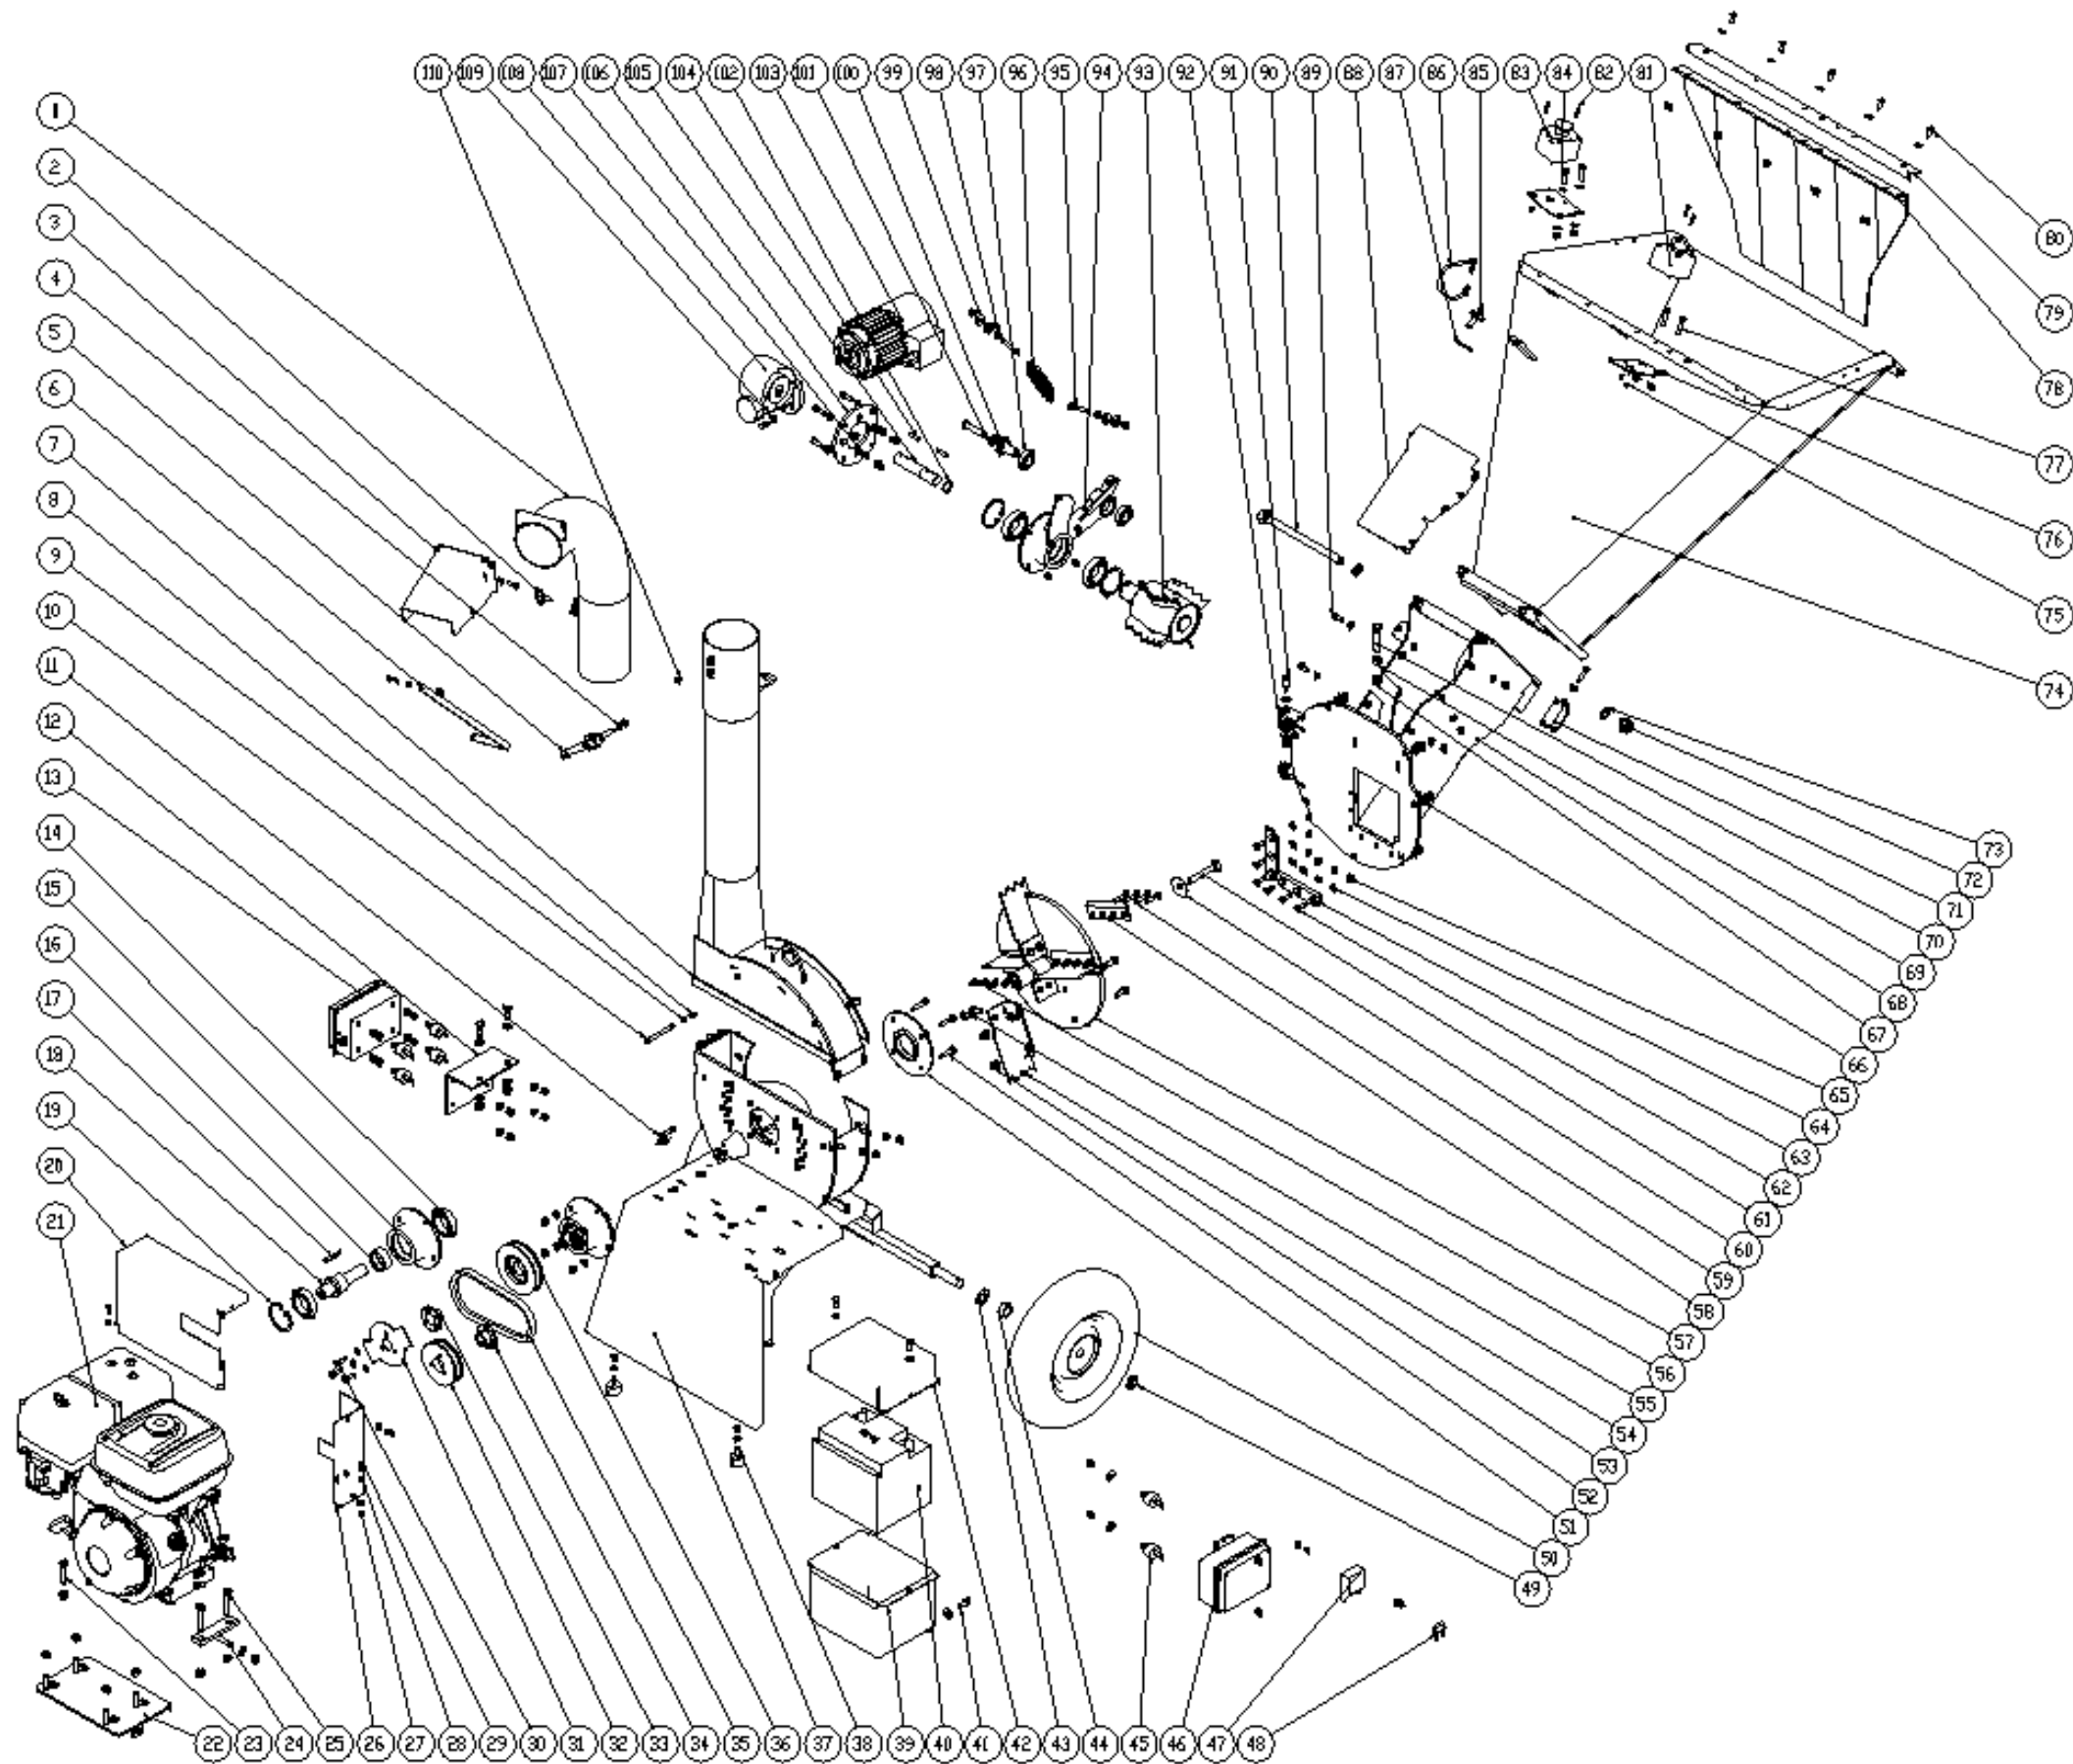

Pos.	Description	Q:ty	Code
1	Discharge tube (curve)	1	001245
2	Knob M8	1	900208
3	Discharge chute	1	000217
4	Nut M8 low	2	900550
5	Handle	1	900606
6	Adjustment chute bar	1	001246
7	Chipper box (upper)	1	001247
8	Screw TE M 5x16	1	900484
9	Washer ø5x10	1	900471
10	Hinge pin	1	205000001
11	Sensor Tilt K15	1	001153
12	No-stress support	1	001248
13	No-stress Plus	1	900555
14	Bearing 9008	4	900343
15	Hub	1	000401
16	Spacer ø40.5x20	1	000398
17	Key 6.3x6.3x50	1	900340
18	Shaft (transmission)	1	000394
19	Seeger ring ø 68	3	900342
20	Cover	1	001249
21	Engine Honda GX 390	1	900019
22	Engine plate	1	001250
23	Screw TE M10x50	2	900037
24	Tie rod (adjustment)	1	000400
25	Screw TE M10x60	2	900155
26	Cover	1	001251
27	Self lock nut M6	6	900041
28	Washer ø6x12	10	900365
29	Screw TE M6x20	12	900395
30	Screw TE M8x25	3	900333
31	Disc counter revs	1	001252

Pos.	Description	Q:ty	Code
32	Pulley 1 SPB 100	1	900334
33	Bush ø24	1	001144
34	Bush ø 25.4	1	900338
35	Belt B-23	1	900339
36	Pulley 1B 118	1	900336
37	Chipper box (lower)	1	001253
38	Vibration-damping ø40x20 M8 M	2	900036
39	Battery box	1	001254
40	Battery 50 Ah	1	900714
41	Screw TE M10x20	2	900242
42	Battery box cover	1	B19003013
43	Washer ø20x3	2	900345
44	Wheels spacer	2	000026
45	Vibration-damping ø30x20 2xM8 M	6	900645
46	Wiring box	1	900878
47	Fuse box	1	900879
48	Fuse 100 A	1	900880
49	Circlip pin ø4.5	2	900033
50	Wheel 3.50-8	2	900007
51	Flange (transmission)	1	001255
52	Screw TE M8x40	4	501840010
53	Self lock nut M10	26	900030
54	Paddle	2	001256
55	Screw TE M10x25	10	900380
56	Self lock nut M8	46	900027
57	Rotor	1	001257
58	Chipper blade	2	000042
59	Screw TSPEI M8x35	8	500002008
60	Washer ø12x36	1	900755
61	Screw TCEI M12x80	1	900881
62	Screw TSPEI M8x25	6	900045

Cippo 7 - Spare parts



Pos.	Description	Q:ty	Code
63	Counter blade	2	000045
64	Washer ø8x16	47	900034
65	Self lock nut M8 lower	8	520002108
66	Washer ø10x20	14	900028
67	Self lock nut M12	1	900362
68	Feed roller box	1	001258
69	Nut M12	1	900719
70	Screw TE M12x60	2	900374
71	Switch	1	900219
72	Self lock nut M16	1	900369
73	Washer ø16x32	2	900003
74	Hopper	1	001259
75	Self lock nut M5	4	900702
76	Plate (emergency stop button)	2	001260
77	Screw TE M8x35	2	900335
78	Protection rubber	1	001261
79	Plate (protection rubber)	1	001262
80	Screw TBEI M8x20	5	900039
81	Emergency stop box	1	000241
82	Screw TCEI M5x20	4	900882
83	Reversible feed roller box	1	001263
84	Screw TE M8x30	7	900368
85	Pin	1	001264
86	Rubber cord	1	900883
87	R pin ø2.5	1	530005501
88	Cover (feed roller box)	1	001265
89	Screw TE M8x20	4	900378
90	Screw TCEI M16x250	1	900884
91	Screw with collar M8x20	2	900885
92	Washer ø30x10,5x5	2	000433
93	Feed roller	1	001266

Pos.	Description	Q:ty	Code
94	Feed roller arm	1	001267
95	Tie rod M8	2	900239
96	Spring ø5.5	1	001271
97	Bearing 6004	2	B23002004
98	Nut M8	3	900720
99	Washer ø8x24	16	900038
100	Rod	1	001268
101	Washer ø12x24	1	900344
102	Seeger ring ø25	1	900347
103	Electric motor MEC 132 M	1	900886
104	Key 8x7x30	2	900376
105	Shaft (gearbox)	1	001269
106	Flange (gearbox)	1	001270
107	Screw TSPEI M6x20	4	900887
108	Gearbox VF49 1100	1	900888
109	Elastic washer A-6	4	900889
110	Greaser M10x1	1	540000010